

AV OVER IP · JPEG2000 4K60 1GBE ENCODER · DUAL LAN

BLU-AV0IP-JP1G2-ENC

4K60 AVoIP 1GbE Encoder with KVM, eARC/ARC and Dual LAN

A JPEG2000 encoder with dual Gigabit LAN ports for separated video and Dante audio streaming, ARC/eARC/S-PDIF/analog audio return, USB 2.0 KVM, two-way IR, RS-232, and relay/GPIO contact control — up to 328ft/100m over CAT6/6A/7, with PoE.



4K60 4:4:4	18Gbps	Dual LAN	eARC/ARC	USB 2.0 / KVM
HDMI 2.0B / HDCP 2.2	VIDEO BANDWIDTH	SEPARATE VIDEO / DANTE	+ S/PDIF, ANALOG RETURN	+ RELAY, GPIO, IR, POE

CONTENTS

01 Introduction	02 Features
03 Package Contents	04 Specifications
05 Operation Controls & Functions	06 IR Pin Definition
07 Rack Mounting Instruction	08 Web GUI Operation Guide
09 MJPEG Substream Operation	10 Switch Model
11 4K over IP System Control	12 Application Example

Bluknot is a registered trademark of Bronx Systems India Private Limited. · www.bronx.co.in · sales@bronx.co.in

01 Introduction

What the BLU-AVOIP-JP1G2-ENC does.

This product is based on JPEG2000 technology. It adopts ASPEED AST1530 for image codec and low delay KVM applications. Encoder input supports up to 4K60 4:4:4, audio embedding or extracting. The product supports ARC/eARC/S/PDIF/analog audio return function, as well as USB 2.0/KVM/Camera, 1G Ethernet, bi-directional RS-232, two-way IR and PoE function. Guest mode controls of RS-232, IR, CEC are supported. Built-in two channel RELAY ports and two channel I/O ports for contact control. Dante AV-A mode is supported if the product is license activated.

This product features dual LAN Copper ports for dual mode settings. It can be controlled via front panel buttons, IR, RS-232, TCP/IP and Web GUI. Built-in MJPEG Substream which supports plenty API commands to achieve flexible configurations is useful for 3rd party control Apps to preview video content.

The system is based on Linux for software development, provides flexible control methods, that are based on the intelligent networking of 1G Ethernet Switch.

02 Features

- HDCP 2.2 compliant
- Support 18Gbps video bandwidth
- Input and output video resolution is up to 4K60 4:4:4, as specified in HDMI 2.0b
- Signal transmission distance can be extended up to 328ft / 100m via CAT6/6A/7 cable
- Transmit video, analog/digital audio, IR, RS-232, CEC and USB 2.0 signal over Ethernet
- ARC/eARC/S/PDIF/analog audio return transmission
- Dante AV-A mode is supported if license activated
- Support analog/Dante audio embedding, and analog/Dante audio de-embedding
- Channel configuration via front panel buttons and LED screen
- Built-in two channel RELAY ports and two channel I/O ports for contact control
- Support unicast and multicast functions
- Support point-to-point, video matrix and video wall functions (video wall supports up to 9x9)
- Intelligent video wall class management
- Built-in dual LAN Copper ports support two working modes:
 - LAN Mode 1: Both JPEG2000 video stream and Dante audio stream are transmitted through the LAN 1(PoE) port
 - LAN Mode 2 (default): JPEG2000 video stream is transmitted through the LAN 1(PoE) port, and Dante audio stream is transmitted through the LAN 2 port
- Support MJPEG Substream for real-time video preview on portable devices
- 1G managed network Switch
- Standard PoE function
- Built-in web page configuration and control, Telnet and SSH as well
- HDMI audio formats: LPCM 2.0/5.1/7.1CH, Dolby Digital/Plus/EX, Dolby True HD, Dolby Atmos, DTS, DTS-96/24, DTS-EX DSD, DTS High Res, DTS-HD Master
- Flexible control via front panel buttons, IR, RS-232, TCP/IP and Web GUI
- Smart networking design for easy and flexible installation

03 Package Contents

1	1 × 4K60 over IP 1GbE Encoder
2	1 × IR Receiver cable (1.5 meters)
3	1 × IR Blaster cable (1.5 meters)
4	3 × 3-pin 3.81mm Phoenix connector (male)
5	2 × 4-pin 3.81mm Phoenix connector (male)
6	1 × 12V/2.5A Locking Power adapter

7	2 × Mounting ear
8	4 × Machine screw (KM3*4)
9	1 × User Manual

04 Specifications

Technical, connection, power and mechanical figures.

TECHNICAL	
HDMI Compliant	HDMI 2.0b
HDCP Compliant	HDCP 2.2
Video Bandwidth	18Gbps
Video Compression Standard	JPEG2000
Video Network Bandwidth	1G
USB Bandwidth	TX USB 2.0 DEVICES to TX HOST: 480Mbps
Video Resolution	Up to 4K@60Hz 4:4:4
Color Depth	Input: 8/10/12-bit (1080p@60Hz); Output: 8-bit
Color Space	RGB, YCbCr 4:4:4 / 4:2:2, YUV 4:2:0
HDR	Both input and output support HDR
HDMI Audio Formats	LPCM 2.0/5.1/7.1CH, Dolby Digital/Plus/EX, Dolby True HD, Dolby Atmos, DTS, DTS-96/24, DTS-EX DSD, DTS High Res, DTS-HD Master, DTS:X
Audio Sample Rate	44.1~192KHz
Transmission Distance	100M CAT6/6A/7
IR Level	Default 12V, optional 5V
IR Frequency	Wideband 20K - 60KHz
ESD Protection	IEC 61000-4-2: ±15kV (Air-gap discharge) & ±8kV (Contact discharge)

CONNECTION	
Input	1x HDMI IN [HDMI Type A, 19-pin female] 1x L/R AUDIO IN [3-pin 3.81mm Phoenix connector, supporting unbalanced 2CH, Max input level 2Vrms]
Output	1x HDMI OUT [HDMI Type A, 19-pin female] 1x L/R AUDIO OUT [3-pin 3.81mm Phoenix connector, supporting unbalanced 2CH, Max input level 2Vrms] 1x SPDIF OUT [Optical audio connector]
Control	1x RS-232 [3-pin 3.81mm Phoenix connector] 2x LAN [RJ45 jack, LAN 1 supports PoE] 1x USB 2.0 HOST [USB Type B, 4-pin female] 2x USB 2.0 DEVICE [USB Type-A, 4pin female] 2x RELAYS [3.81mm Phoenix connector] 2x DIGITAL IO [3.81mm Phoenix connector] 1x IR IN [3.5mm audio jack, 5V/12V IR] 1x IR OUT [3.5mm audio jack, 5V/12V IR]


MECHANICAL & POWER	
Housing	Metal enclosure
Color	Black
Dimensions	204mm [W] x 136mm [D] x 25.5mm [H]
Weight	631g
Power Supply	Input: AC100-240V 50/60Hz · Output: DC 12V/2.5A (US/EU standards, CE/FCC/UL certified)
Power Consumption	9.12W (Max.)
Operating Temperature	32-104°F / 0-40°C
Storage Temperature	-4-140°F / -20-60°C
Relative Humidity	20-90% RH (no condensing)

RECOMMENDED HDMI CABLE LENGTH			
	4K60	4K30	1080P60
HDMI IN/ OUT	16ft / 5M	32ft / 10M	50ft / 15M

The use of a “Premium High Speed HDMI” cable is highly recommended.

05 Operation Controls & Functions

5.1 Encoder Panel

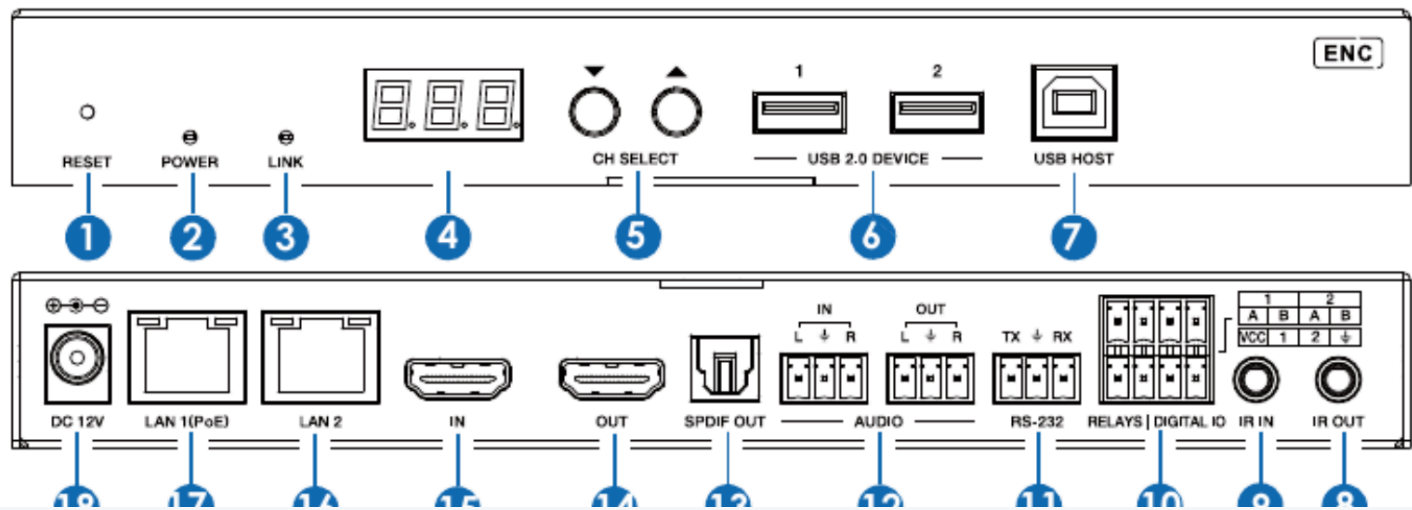

1	RESET	During device operation, press and hold the RESET button for 5 seconds. When the POWER LED and LINK LED flash simultaneously and the LED screen displays 3 dots, it indicates that the device is resetting. Then you can release the RESET button. The device is in unicast mode after the reset.
2	POWER LED (Red)	- Light on: The system is powered on (with POE or DC power supply). - Light off: The system is powered off (without POE or DC power supply).
3	LINK LED (Green)	Connection status LED. - Light on: Encoder and Decoder are connected through the LAN 1(PoE)/LAN 2 port, and there is video signal transmitted to the Decoder. - Light flashes: Encoder and Decoder are connected through the LAN 1(PoE)/LAN 2 port, but there is no video signal transmitted to the Decoder. - Light off: Encoder and Decoder are not connected through the LAN 1(PoE)/LAN 2 port.
4	LED screen	Shows Encoder ID as default. Displays the corresponding options of configuration functions during setting Encoder configurations.
5	CH SELECT	UP and DOWN buttons, used to set Encoder ID and other settings.
6	USB 2.0 DEVICE	Connect to USB 2.0 devices.
7	USB HOST	USB Host port, connected to a PC.
8	IR OUT	IR signal output port. The IR level can be set to 5V or 12V (default) through the panel buttons.
9	IR IN	IR signal input port. The IR level can be set to 5V or 12V (default) through the panel buttons.
10	RELAYS / DIGITAL IO	VCC: Power output (12V or 5V configurable), maximum to 12V@50mA, 5V@100mA loading. The default output is 12V. RELAYS: 2 channel low-voltage relay ports, each group is independent and isolated, maximum to 1A 30VDC loading. Contacts are disconnected by default. DIGITAL IO: 2 channel GPIO ports, for digital level signal output control or input detection (up to 12V level detection). The output control mode (default mode, low level as default output) or input detection mode is configurable. The DIGITAL IO internal pull-up voltage follows the VCC. Output control mode: (a) The maximum withstand sink current is 50mA when outputting low level. (b) When VCC is 5V and high level is output, the maximum current driving capacity is 2mA. (c) When VCC is 12V and high level is output, the maximum current driving capacity is 5mA. Input detection mode: (a) When VCC is 5V, DIGITAL IO is pulled up to 5V internally through a 2.2K ohm resistor. (b) When VCC is 12V, DIGITAL IO is pulled up to 12V internally through a 2.2K ohm resistor.
11	RS-232	RS-232 serial port, supporting RS-232 command pass-through and local serial port control.
12	AUDIO IN/OUT	AUDIO IN: Analog audio input port, the audio can be embedded into the HDMI signal for pass-through over to HDMI output and audio out on Decoder, or be loopout by the AUDIO OUT port on Encoder. AUDIO OUT: Analog audio output port. It can output the audio extracted from the HDMI IN port (in case of LPCM). Also it can output the audio transmitted from the AUDIO IN port of the Decoder in unicast mode (point-to-point direct connection).

13	SPDIF OUT	S/PDIF signal output port. It can output the ARC or S/PDIF audio returned from the Decoder when both the Encoder and Decoder are correspondingly set to the ARC or S/PDIF audio return mode (Set through the Controller Box or API commands in Multicast mode; Set through the front panel buttons in unicast mode).
14	HDMI OUT	HDMI local loop output port, connected to an HDMI display device such as TV or monitor.
15	HDMI IN	HDMI signal input port, connected to an HDMI source device such as Blu-ray Player or Set-top box with an HDMI cable.
16	LAN 2	1G LAN port, connected to a network Switch to form a distributed system, in which it transmits Dante audio stream by default. When the product is set to LAN Mode 1, the LAN 2 port is nonfunctional. Yellow LED: Light flash when there is data transmission, and light off when there is no data transmission. Green LED: Light on when the network is linked normally, and light off when the network is not linked.
17	LAN 1(PoE)	1G LAN port, supporting PoE function, connected to a network Switch to form a distributed system, in which it transmits JPEG2000 video stream by default. When the product is set to LAN Mode 1, the LAN 1(PoE) port can transmit both JPEG2000 video stream and Dante audio stream. Yellow LED: Light flash when there is data transmission, and light off when there is no data transmission. Green LED: Light on when the network is linked normally, and light off when the network is not linked. Note: When the network Switch delivers PoE power supply, DC 12V adapter doesn't need to apply on the unit.
18	DC 12V	The device can be powered via two methods: • Local DC 12V/2.5A power supply • PoE from Network Switch. Device acts as PD mode. When the Switch supports PoE function, DC power supply is not needed.

Operation description of the LED screen and CH SELECT buttons (for Encoder):

1. **ENC ID:** After the system is powered on, the Encoder's LED screen will show the ENC ID (000 by default if not set).
2. **IP address:** Press and hold the UP button for 5 seconds, the Encoder's LED screen will show in sequence “IPx”, “xxx”, “xxx”, “xxx”, “xxx”, which are the IP mode and IP address of Encoder.
3. **Configuration mode:** Press and hold UP + DOWN buttons at the same time for 5 seconds, then release to enter the configuration mode with “CFN” displaying on the LED screen.
4. **Device ID settings:** After entering the configuration mode, press the UP/DOWN button to enter the first page with the current ID number (e.g. 001) displaying on the LED screen (000 by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the ID settings mode, in which the ID number on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the device ID you desired (ID range: 000~762), then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing. After setting, the unit will reboot automatically. *Note: The device ID can not be modified in Controller Box mode.*
5. **EDID settings:** After entering the configuration mode, press the UP/DOWN button to enter the second page with “E00” (in which “E” refers to EDID, “00” to EDID ID) or “COP” (which indicates copy EDID) displaying on the LED screen (E15 by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the EDID settings mode, in which the EDID ID number on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the EDID ID you desired, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing. The corresponding EDID ID list follows below.

EDID SETTING LIST			
EDID ID	EDID DESCRIPTION	EDID ID	EDID DESCRIPTION
E00	1080P_Stereo_Audio_2.0_SDR	E12	4K2K60_420_Stereo_Audio_2.0_SDR
E01	1080P_DolbyDTS_5.1_SDR	E13	4K2K60_420_DolbyDTS_5.1_SDR
E02	1080P_HD_Audio_7.1_SDR	E14	4K2K60_420_HD_Audio_7.1_SDR
E03	1080I_Stereo_Audio_2.0_SDR	E15	4K2K60_444_Stereo_Audio_2.0_SDR
E04	1080I_DolbyDTS_5.1_SDR	E16	4K2K60_444_DolbyDTS_5.1_SDR
E05	1080I_HD_Audio_7.1_SDR	E17	4K2K60_444_HD_Audio_7.1_SDR
E06	3D_Stereo_Audio_2.0_SDR	E18	4K2K60_444_Stereo_Audio_2.0_HDR_10-bit
E07	3D_DolbyDTS_5.1_SDR	E19	4K2K60_444_DolbyDTS_5.1_HDR_10-bit
E08	3D_HD_Audio_7.1_SDR	E20	4K2K60_444_HD_Audio_7.1_HDR_10-bit
E09	4K2K30_444_Stereo_Audio_2.0_SDR	E21	DVI_1280x1024
E10	4K2K30_444_DolbyDTS_5.1_SDR	E22	DVI_1920x1080
E11	4K2K30_444_HD_Audio_7.1_SDR	E23	DVI_1920x1200


Note: In point to point connection mode, before using the EDID copy function, all codecs need to be set to CA1 unicast mode, and after setting, the HDMI cable of the Decoder needs to be re-plugged to report the EDID of TV to the Encoder.

6. **IR mode settings:** After entering the configuration mode, press the UP/DOWN button to enter the third page with “IR2” (in which “IR” refers to IR, and “2” to 12V) displaying on the LED screen (IR2 by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the settings mode, in which the IR mode (IR1 or IR2) on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the IR mode, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing.
- The corresponding IR mode options are: **IR1** — 5V IR wire; **IR2** — 12V IR wire.
7. **Audio embedding mode settings:** After entering the configuration mode, press the UP/DOWN button to enter the fourth page with “HDI/ANA” displaying on the LED screen (HDI by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the settings mode, in which the audio return mode (HDI/ANA) on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the mode, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing.
- The corresponding audio embedding mode options are: **HDI** — HDMI audio embedding; **ANA** — Analog audio embedding.
8. **IP mode settings:** After entering the configuration mode, press the UP/DOWN button to enter the fifth page with “IP1/IP2/IP3” displaying on the LED screen (IP3 by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the settings mode, in which the IP mode on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the mode, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing. After setting, the unit will reboot automatically.
- The corresponding IP mode options are: **IP1** — Static IP mode (Default IP address: 169.254.100.254); **IP2** — DHCP IP mode; **IP3** — Auto IP mode (Default assigned network segment: 169.254.xxx.xxx). *Note: The IP mode can not be modified in Controller Box mode.*
9. **Multicast mode settings:** After entering the configuration mode, press the UP/DOWN button to enter the sixth page with “CA1/CA2” displaying on the LED screen (CA1 by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the settings mode, in which the multicast mode on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the mode, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing. After setting, the unit will reboot automatically.
- The corresponding multicast mode options are: **CA1** — Unicast mode; **CA2** — Multicast mode.
10. **Audio return mode settings:** After entering the configuration mode, press the UP/DOWN button to enter the seventh page with “C2C/A2A” displaying on the LED screen (C2C by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the settings mode, in which the audio return mode on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the mode, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing. After setting, the unit will reboot automatically.
- The corresponding audio return mode options are: **C2C** — the eARC/ARC or S/PDIF audio from the Decoder is transmitted back to the HDMI IN or SPDIF OUT port of the Encoder; **A2A** — the analog audio embedded in the Decoder is transmitted back to the AUDIO OUT analog audio port of the Encoder.
11. **LAN mode settings:** After entering the configuration mode, press the UP/DOWN button to enter the eighth page with “L01/L02” displaying on the LED screen (L02 by default). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the settings mode, in which the LAN mode on the LED screen will flash at 1Hz, then press the UP/DOWN button to select the mode, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing. After setting, the unit will reboot automatically.
- The corresponding LAN mode options are: **L01** — LAN Mode 1 (both JPEG2000 video stream and Dante audio stream are transmitted through the LAN 1(PoE) port, while the LAN 2 port is nonfunctional); **L02 (default)** — LAN Mode 2 (JPEG2000 video stream is transmitted through the LAN 1(PoE) port, and Dante audio stream is transmitted through the LAN 2 port).

Note: After entering various setting modes, you can hold down the DOWN button to exit the current interface quickly, or if you do not perform any operation within 5 seconds, it will automatically return to the previous interface.

06 IR Pin Definition

Wiring reference for the included IR blaster and receiver cables.

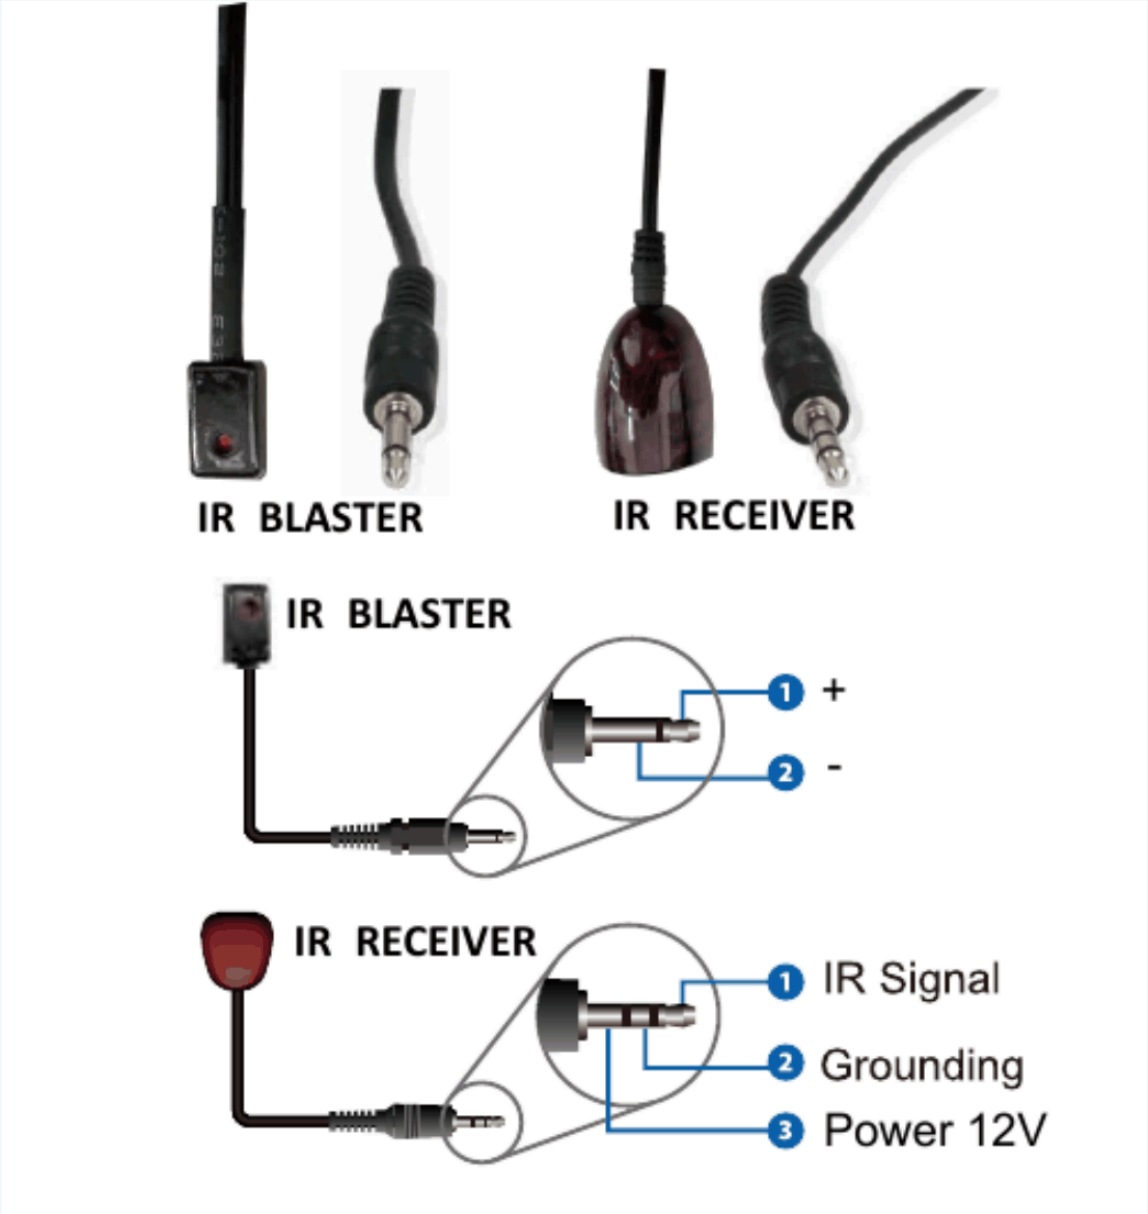

IR BLASTER — pin 1: + · pin 2: -

IR RECEIVER — pin 1: IR Signal · pin 2: Grounding · pin 3: Power 12V

07 Rack Mounting Instruction


07.1 6U V2 Rack Mounting

This product can be mounted in a standard 6U V2 rack (Please contact your supplier for 6U V2 rack sale). The mounting steps are as follows.


Step 1: Use included screws to fix two mounting ears on the product, as shown below.



Step 2: Insert the product with mounting ears into a 6U V2 rack (6/8/10 units can be installed vertically), as shown below.

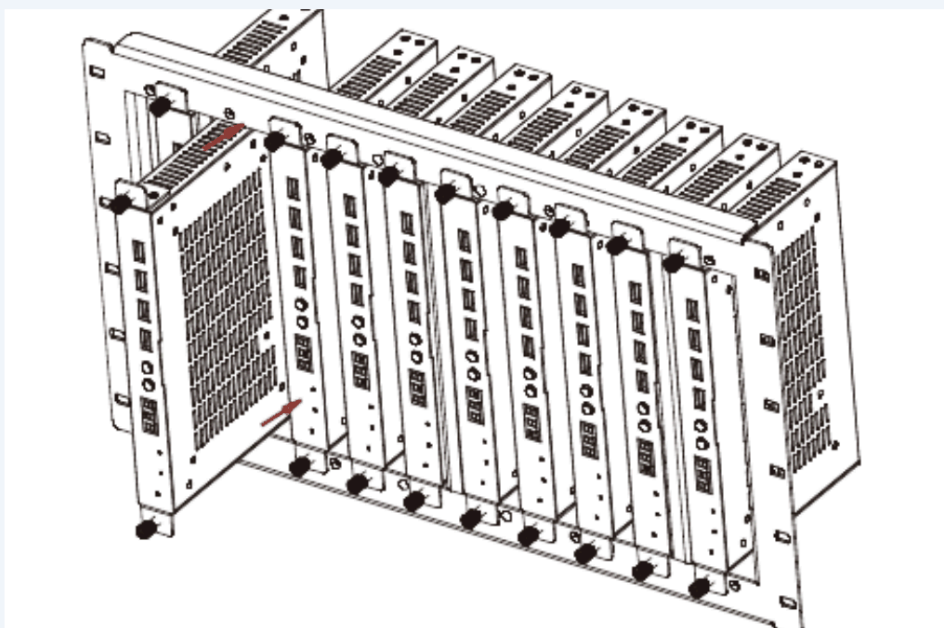

Step 3: Use screws to fix mounting ears on the rack to complete the mounting, as shown below.

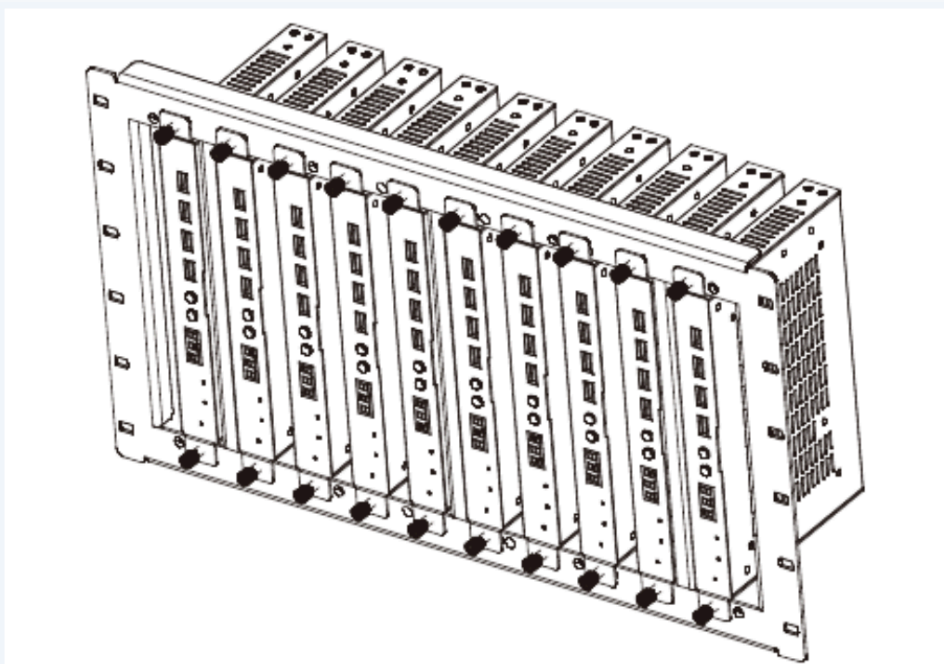


07.2 1U V2 Rack Mounting

This product also can be mounted in a standard 1U V2 rack (2 units can be installed horizontally). The mounting steps are as follows.

Step 1: Use included screws to fix two 1U V2 rack brackets on two products respectively, as shown below.


This product also can be mounted in a standard 1U V2 rack (2 units can be installed horizontally). The mounting steps are as follows.

Step 1: Use included screws to fix two 1U V2 rack brackets on two products respectively, as shown below.

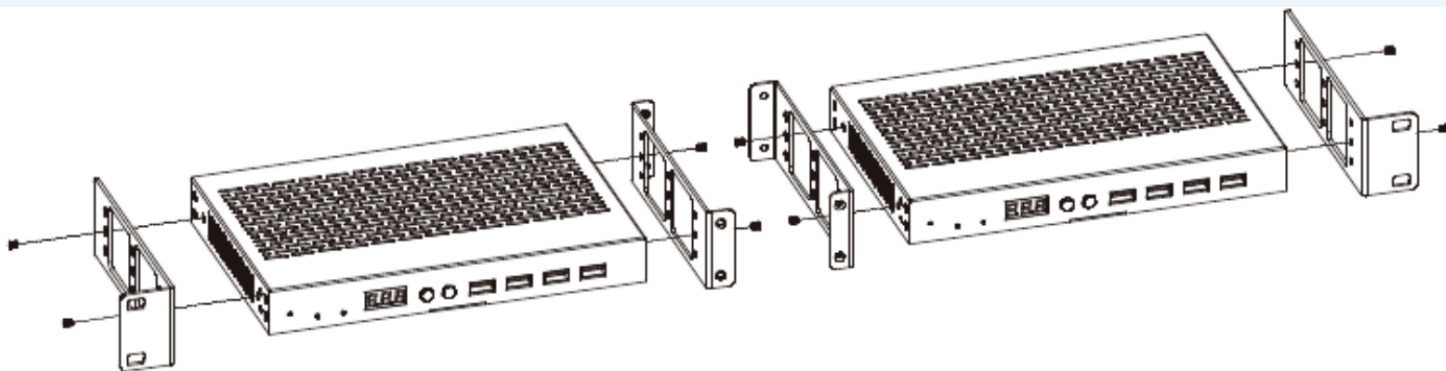


Step 2: Use screws to fix two 1U V2 rack brackets together, as shown below.

Step 2: Use screws to fix two 1U V2 rack brackets together, as shown below.

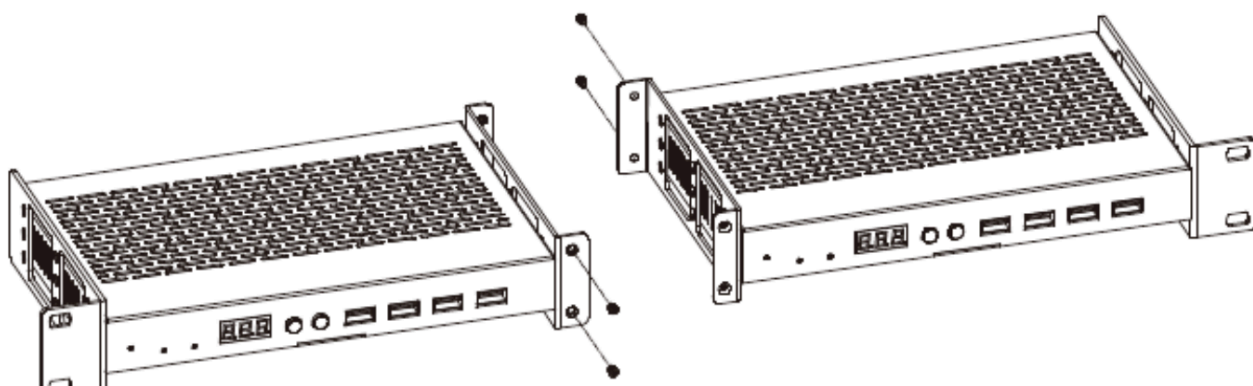

Step 3: Fasten screws between two 1U V2 rack brackets, so that two products are mounted in a 1U V2 rack, as shown below.

are mounted in a 1U V2 rack, as shown in the figure below:

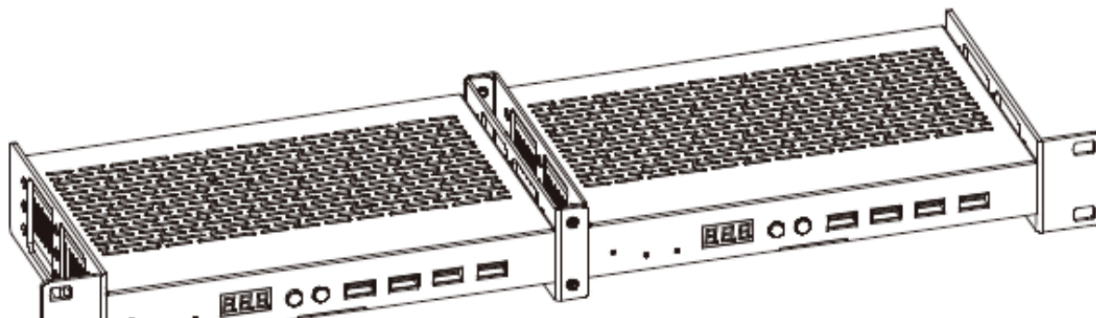


08 Web GUI Operation Guide

08.1 Preparation before Entering the System

The product can be controlled by the built-in Web GUI. The operation steps are as follows.

Step 1: Connect the Encoder, Decoder and PC to the same Switch, then connect an HDMI source device, HDMI display device and power supply. The connection diagram is shown below.

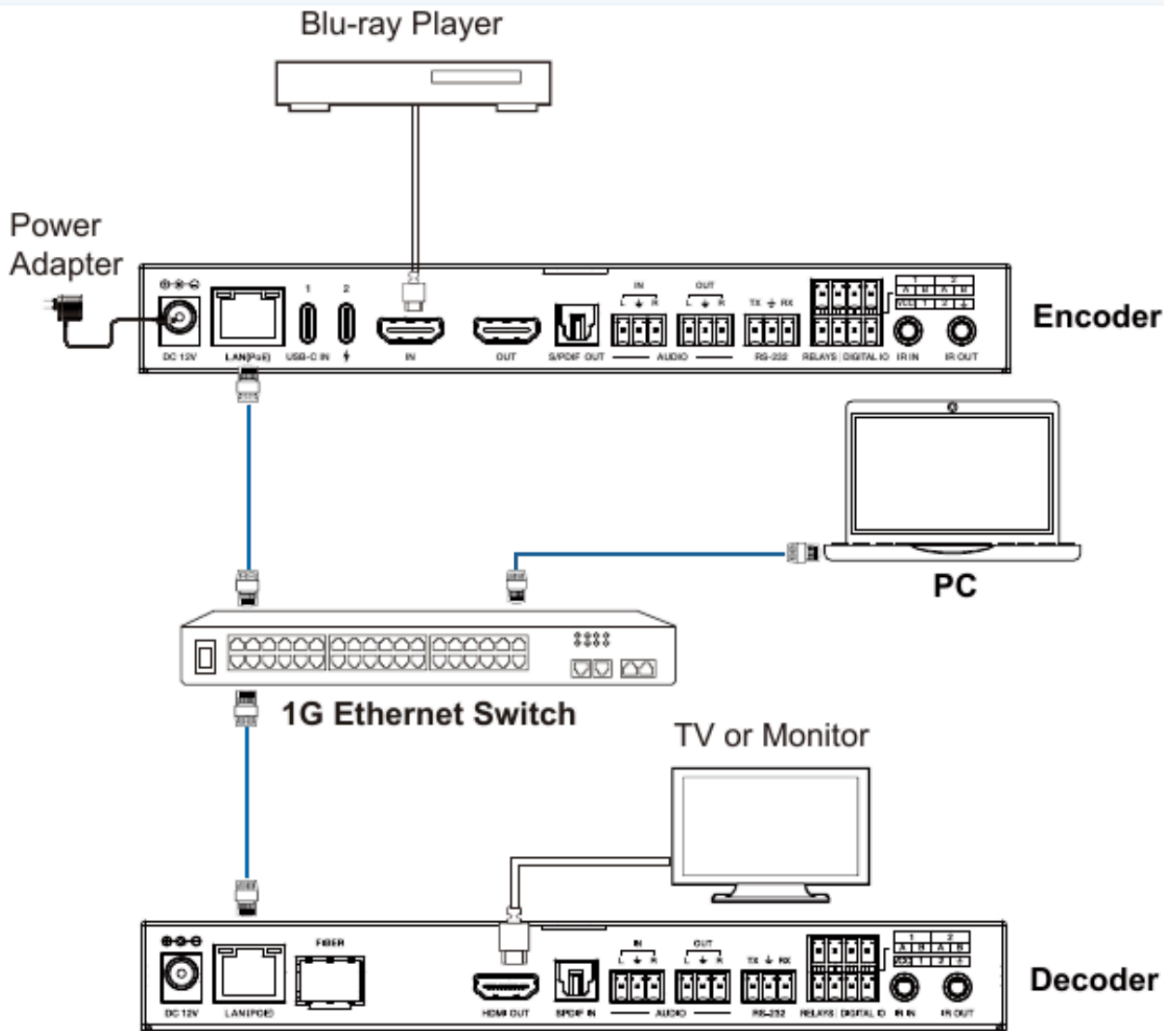

Step 2: Press and hold the UP button on the front panel of Encoder/Decoder for 5 seconds to check the current IP Address.


Step 2: Press and hold the UP button on the front panel of Encoder/Decoder for 5 seconds to check the current IP Address.

Step 3: Set the PC's IP address to the same network segment with IP address of the Encoder/Decoder found in step 2.

Step 4: Input the IP address of the Encoder/Decoder into the web browser on PC to access the Web GUI of Encoder/Decoder.

System

(1) **Version Information:** The software version of the device.

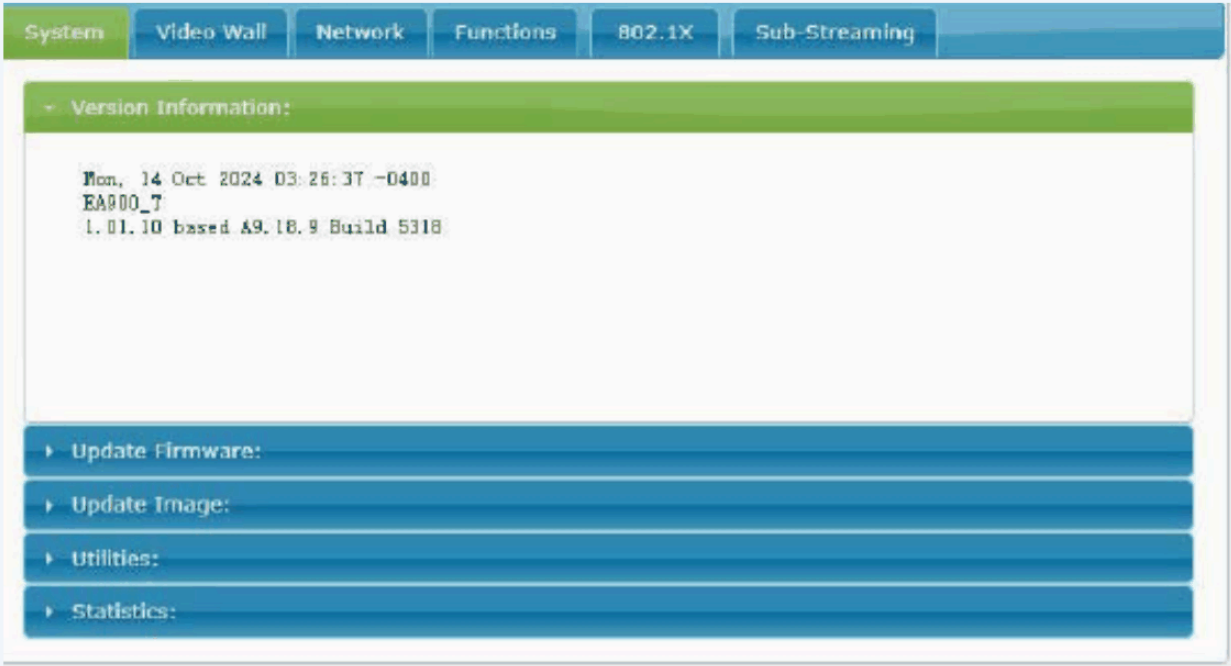

(2) **Update Firmware:** The firmware update interface.

System

Video Wall

Network

Functions

802.1X

Sub-Streaming

▶ Version Information:

▶ Update Firmware:

Choose File

No file chosen

Upload


Warning: Stop any service by disconnecting from the peer before you proceed to upgrade firmware.

▶ Update Image:

▶ Utilities:

▶ Statistics:

(3) **Update Image:** The standby and logo image upload interface.

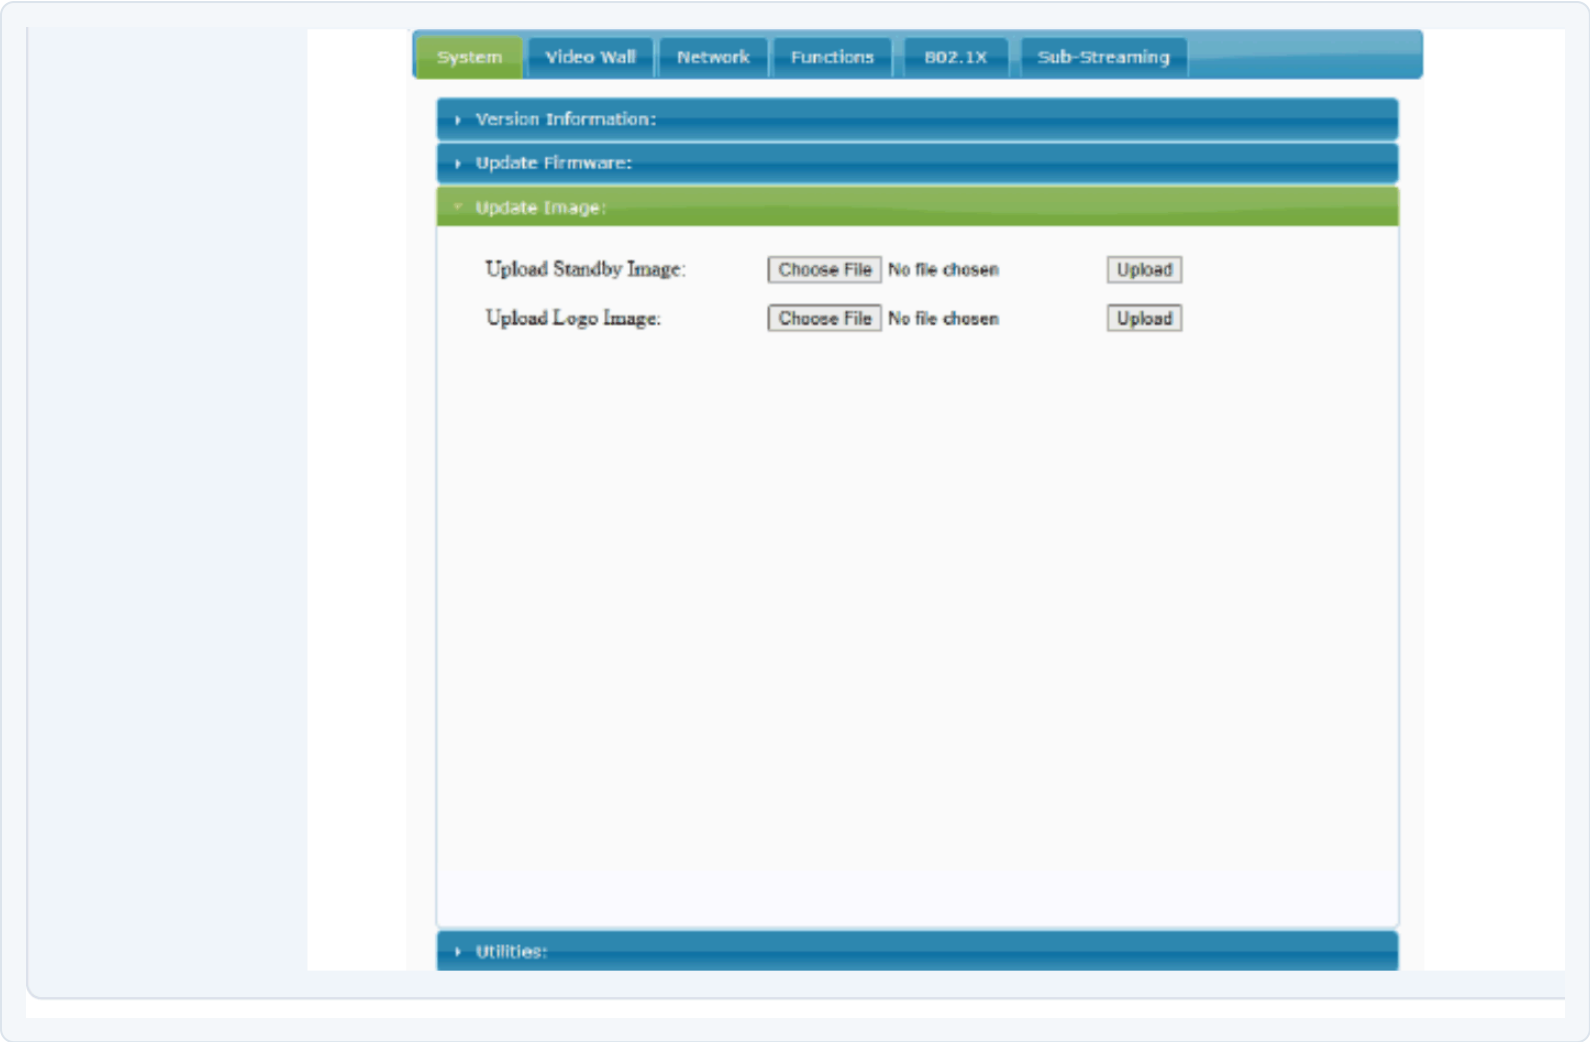

(4) **Utilities:** This interface allows users to restore to factory default settings, reboot device, set EDID mode, console API command.

SystemVideo WallNetworkFunctions802.1XSub-Streaming

▸ Version Information:

▸ Update Firmware:

▸ Update Image:

▾ Utilities:

Commands

Factory DefaultReboot

Reset EDID to Default Value:

☒ Default HDMI EDID

☐ Default DVI EDID

☐ Default VGA EDID

Apply


Console API Command

Apply

Output

(5) **Statistics:** The status information of the device.

The statistics interface of Encoder is as follows.

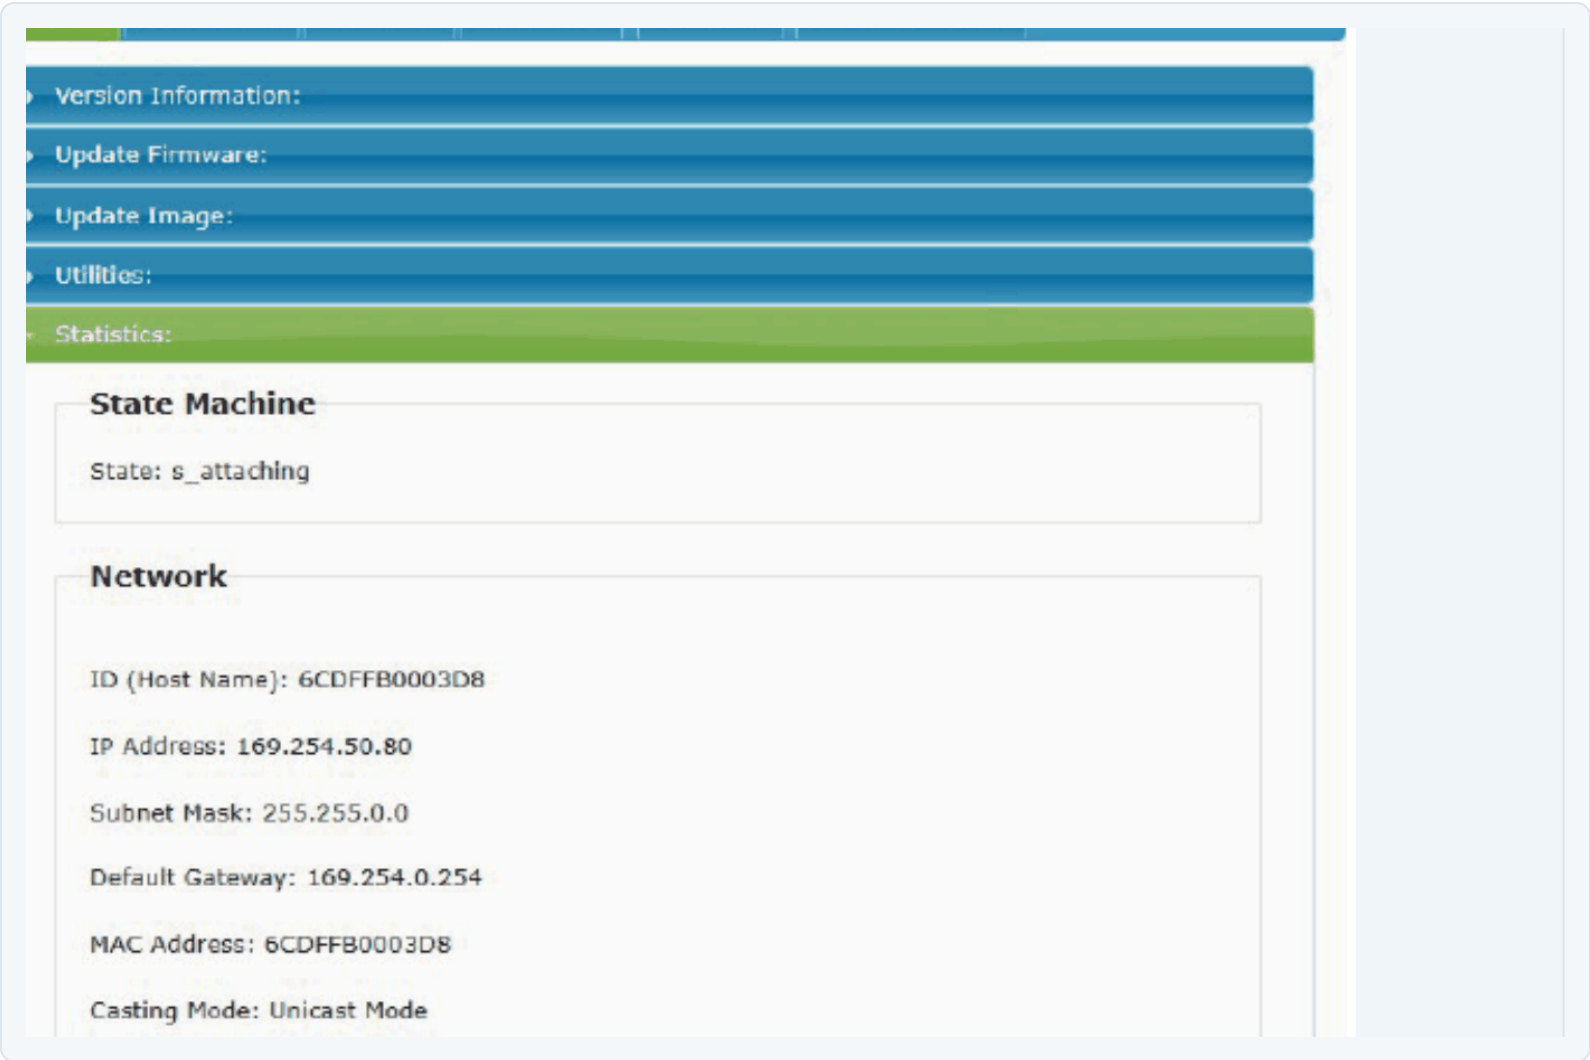

Link Status: on

Link Mode: 1G

Video

EDID Used:

```
00 ff ff ff | ff ff ff 00 | 20 83 00 73 | 00 00 00 01 |
24 1f 01 03 | 80 33 1d 78 | ee ee 95 a3 | 54 4c 99 26 |
0f 50 54 a5 | 4b 00 71 4f | 81 80 d1 c0 | 01 01 01 01 |
01 01 01 01 | 01 01 02 3a | 80 18 71 38 | 2d 40 58 2c |
45 00 fe 1f | 11 00 00 1e | 01 1d 00 72 | 51 d0 1e 20 |
6e 28 55 00 | 0c 8e 31 00 | 00 18 00 00 | 00 fc 00 49 |
50 20 45 78 | 74 65 6e 64 | 65 72 0a 20 | 00 00 00 fd |
00 38 4c 1e | 53 11 00 0a | 20 20 20 20 | 20 20 01 46 |
02 03 1f f1 | 4c 90 02 03 | 01 07 16 12 | 04 1f 13 14 |
05 23 09 07 | 07 65 03 0c | 00 10 00 83 | 01 00 00 02 |
3e 80 3e 71 | 38 3d 48 58 | 3e 45 88 6e | 1f 31 88 88 |
```

The statistics interface of Decoder is as follows.

SystemVideo WallNetworkFunctions802.1XSub-Streaming

▸ Version Information:

▸ Update Firmware:

▸ Update Image:

▸ Utilities:

▾ Statistics:

State Machine

State: s_idle

Network

ID (Host Name): 6CDFFB0003D3

IP Address: 169.254.20.2

Subnet Mask: 255.255.0.0

Default Gateway: 169.254.1.1

MAC Address: 6CDFFB0003D3

Casting Mode: Unicast Mode

Link Status: on

Link Mode: 1G

Video

Local Video Output:

attached=y

HDCP Ver=Unknown

Checksum: ok

Extension: 1

CEA Ext (block 1): y

CEA Ext Checksum: ok

HDMI 2.0: n

Video Wall

(1) **Basic Setup:** This interface allows users to perform basic settings, such as set the bezel, gap, size and position of the video wall, as well as select the stretch type, rotate and flip.

SystemVideo WallNetworkFunctions802.1XSub-Streaming

Basic Setup:


Bezel and Gap Compensation

OW:

OH:

VW:

VH:

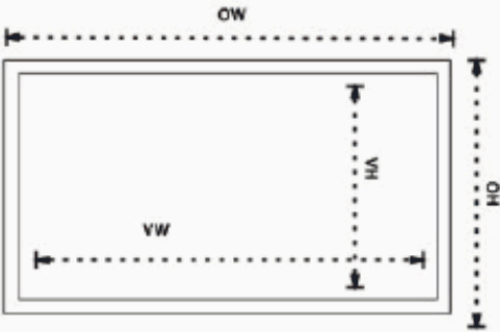

UNIT: 0.1mm


Wall Size and Position Layout

Vertical Monitor Count:

Horizontal Monitor Count:

Row Position:

Column Position:

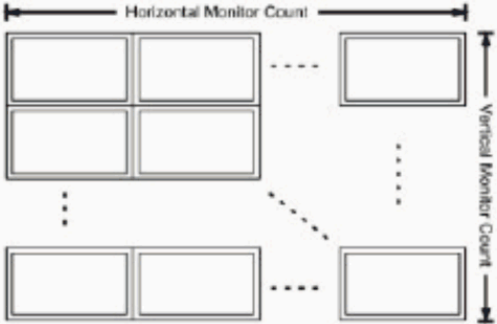

UNIT: Panel

Preferences

Stretch Type:

Rotate and Flip:

Apply To: "This" device connected by your browser

Apply

☐ Show OSD

bluknot · BLU-AV0IP-JP1G2-ENC · Bronx Systems India Private Limited

21 / 38

(2) **Advanced Setup:** This interface allows users to perform advanced settings for the video wall.

System

Video Wall

Network

Functions

802.1X

Sub-Streaming

Basic Setup:

Advanced Setup:

Step 1: Choose Control Target

0

☐ Show OSD

Step 2: Control Options

Reset to Basic Setup:

Reset

Stretch Type:

Fit In

Apply

Clockwise Rotate:

0

Apply

Screen Layout (Row x Column):

1

X

1

Apply

Row Position:

0

Apply

Column Position:

0

Apply

Network

This interface allows users to set the IP and select the casting mode (multicast/unicast). Three IP modes are supported:

- **Auto IP:** The IP address is set automatically. After the device is powered off and restarted, a new IP address is randomly assigned.
- **DHCP:** The IP address of the device is assigned by the router.
- **Static:** Static IP address.

SystemVideo WallNetworkFunctions802.1XSub-Streaming

IP Setup

IP Mode:

Auto IPDHCPStatic

IP Address:

169.254.50.80

Subnet Mask:

255.255.0.0

Default Gateway:

169.254.0.254

Apply

Casting Mode

MulticastUnicast

☒ Auto select USB operation mode per casting mode (recommended)

Apply

Functions

This interface allows users to select the modes of video, USB, serial port and audio.

System

Video Wall

Network

Functions

802.1X

Sub-Streaming

Video over IP

☒ Enable Video over IP

Maximum Bit Rate:

Best Effort

Apply

USB over IP

☒ Enable USB over IP

Operation Mode:

☒ Auto select mode (Recommended, choose per network casting mode)

☐ Active on link (Unicast network's default mode)

☐ Active per request (Multicast network's default mode)

Compatibility Mode:

☐ Mouse not responding well (Check when USB mouse responding is slow and queer)

☒ K/M over IP (Uncheck when mouse/keyboard/touch panel not working as expected)

Apply

Serial over IP

☒ Enable Serial over IP

Operation Mode:

bluknot · BLU-AV0IP-JP1G2-ENC · Bronx Systems India Private Limited

24 / 38

- ☐ Type 1 (Need extra control instruction. For advanced usage.)
- ☒ Type 2 (Recommended. Dumb redirection.)
- ☐ Type 1 guest mode
- ☐ Type 2 guest mode

Baudrate Setting for Type 2:

Baudrate:115200▼

Data bits:8▼

Parity:None▼

Stop bits:1▼

Apply

Audio over IP

☒ Enable Audio Over IP

☒ Enable Audio Return Path

☐ Enable Local Audio Extraction(Extract input audio to analog

ADDON Configuration:

ADDON Type:

None▼

☐ Enable ADDON Bridge Mode (ASPEED <—> ADDON)

Apply

802.1X

This interface allows users to enable 802.1X authentication and validate server certificate.

SystemVideo WallNetworkFunctions802.1XSub-Streaming

Configuration

☐ Enable 802.1X Authentication

☐ Validate Server Certificate

CA certificate:

Choose FileNo file chosen

Upload

Server Certificate Start Time:(YYYY.MM.DD-hh:mm:ss)


Authentication Method:

- Select -

Apply

Sub-Streaming

This interface allows users to preview the video of the signal source in real time.

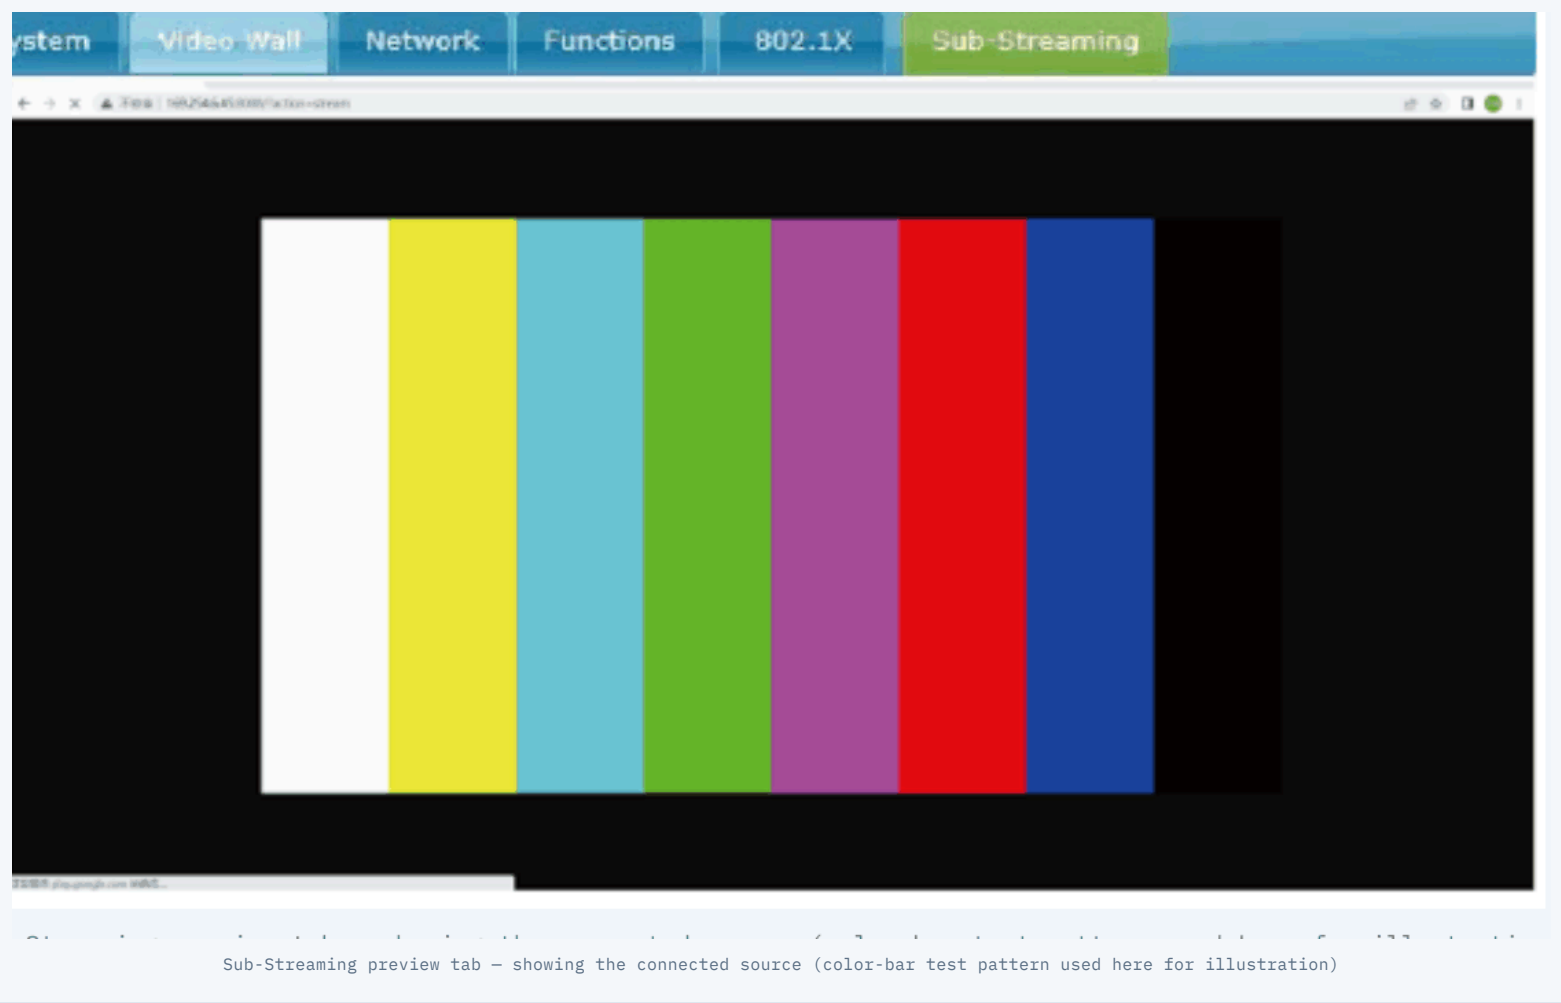


09 MJPEG Substream Operation Introduction

09.1 MJPEG Substream Preview/Configuration via Web Page

The product supports playing MJPEG Substream on computer through the corresponding software such as **VLC media player**, simultaneously you can access the Web page to configure the MJPEG Substream. Follow the steps below to preview and configure the MJPEG Substream.


- Step 1:** Connect the Encoder, Decoder and PC to the same Switch, then connect an HDMI source device, HDMI display device and power supply.
- Step 2:** Install a bonjour protocol checking tool (such as zeroconfServiceBrowser) on PC to find the IP address of the Encoder/Decoder. Take zeroconfServiceBrowser as an example. After opening the software, you can select “Workgroup Manager” in Services of Browser, select the Host name in Service-Instances, and find the IP address in the Address item of Instance-Info.

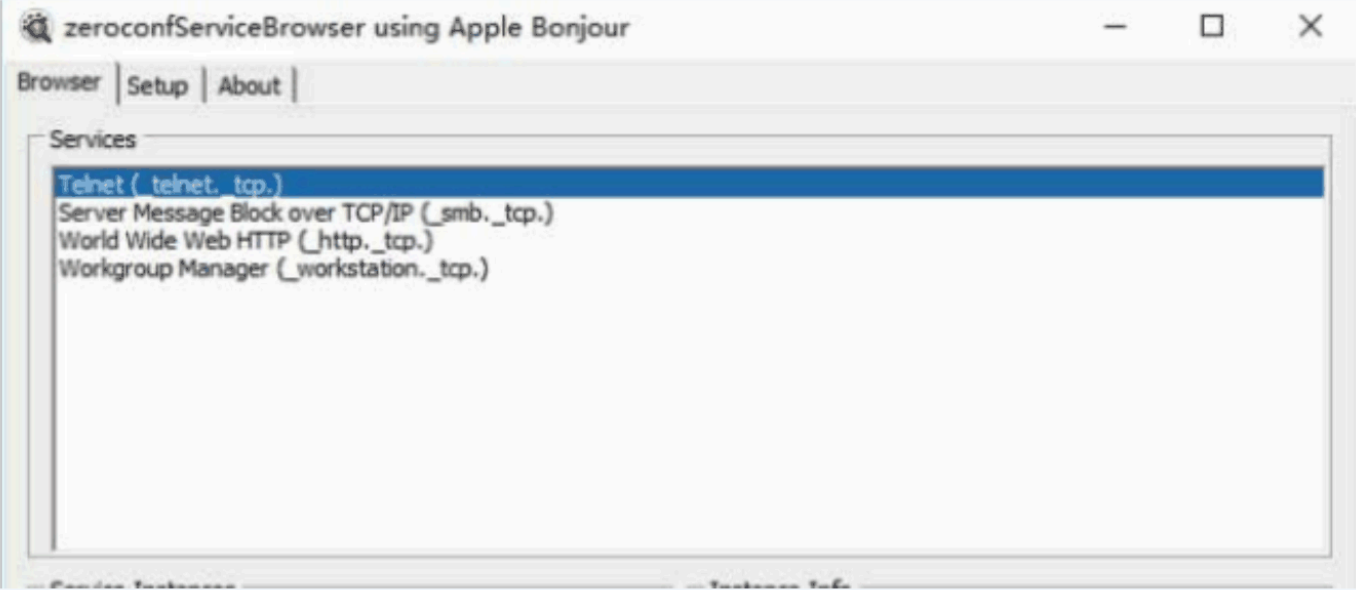

zeroconfServiceBrowser – Host name, IP address and port of the Encoder/Decoder


Notes: (1) The window in the lower left corner displays the Host names of all devices in the current network. (2) The window in the lower right corner displays the Host name, IP address and Port number of the device. (3) The Host name of Encoder starts with AST-ENC; the Host name of Decoder starts with AST-DEC.

Step 3: Set the PC's IP address to the same network segment with IP address of the Encoder/Decoder found in step 2.

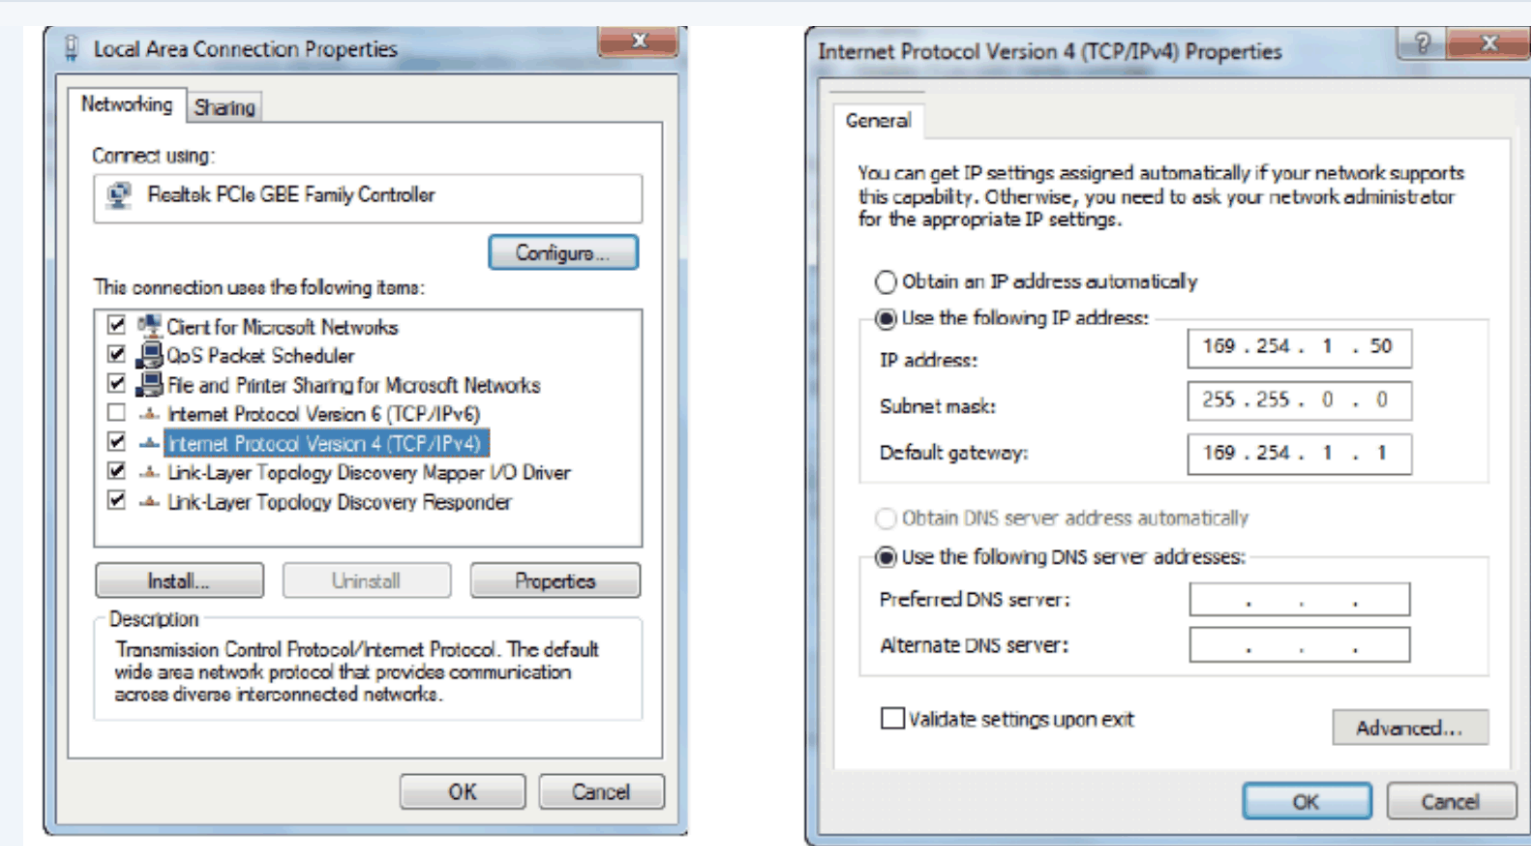

Windows Local Area Connection & TCP/IPv4 Properties

Step 4: According to the IP address of the Encoder/Decoder found through the bonjour protocol checking tool, input “http://IP:PORT/?action=stream” into the web browser on PC. The MJPEG Substream will be displayed with the default resolution, as shown below.

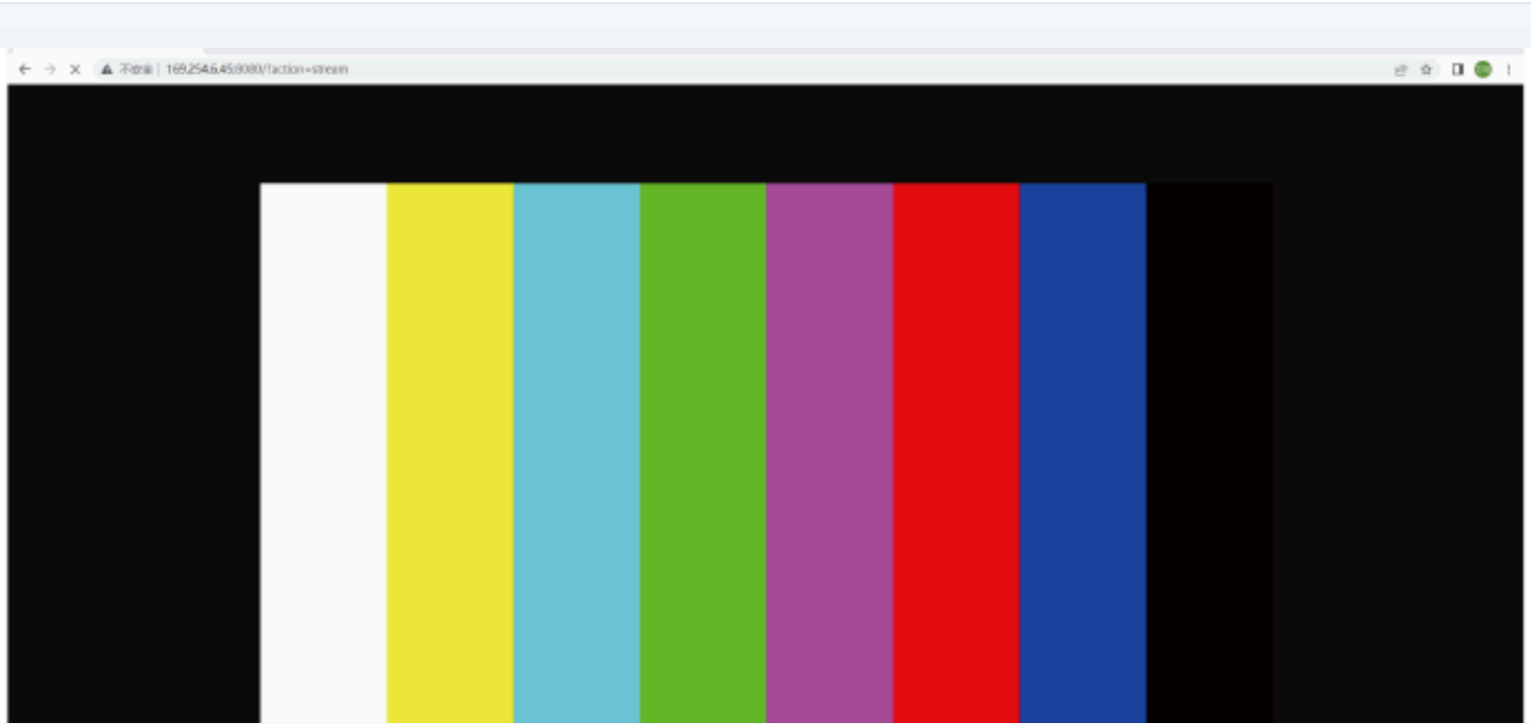


MJPEG Substream – default resolution

Step 5: Change the resolution of the obtained Encoder/Decoder IP address in the following format.

```
http://IP:PORT/?action=stream&w=x&h=x&fps=x&bw=x&as=x&mq=x
```

- **WIDTH:** [Optional] image width. In pixels. 'x' means no change. Default is 640.
- **HEIGHT:** [Optional] image height. In pixels. 'x' means no change. Default is 360.
- **FRAMERATE:** [Optional] frame rate of sub-stream. Unit: fps (frame per second). 'x' means no change. Default is 30.
- **BW:** [Optional] maximum bandwidth of sub-stream traffic. Unit: Kbps (Kbits per second). 'x' means no change. Default is 8000 (8Mbps).
- **AS:** [Optional] aspect ratio configuration. 'x' means no change. Default is 0. 0: extend to what “WIDTH” and “HEIGHT” configured. 1: [A1 only] keep original aspect ratio and place in the center of output (letterboxing or pillarboxing).
- **MINQ:** [Optional] minimum image quality number. Range: 10, 20, ..., 90, 100, higher setting means better image quality. 'x' means no change. Default value is 10. Limit driver auto bandwidth control's minimum quality number. If quality lower than MINQ value, the driver will drop frame by returning 0 size file.


After changing, input the new Encoder/Decoder IP address into the web browser on PC, the MJPEG Substream will be displayed with the desired resolution, as shown below.

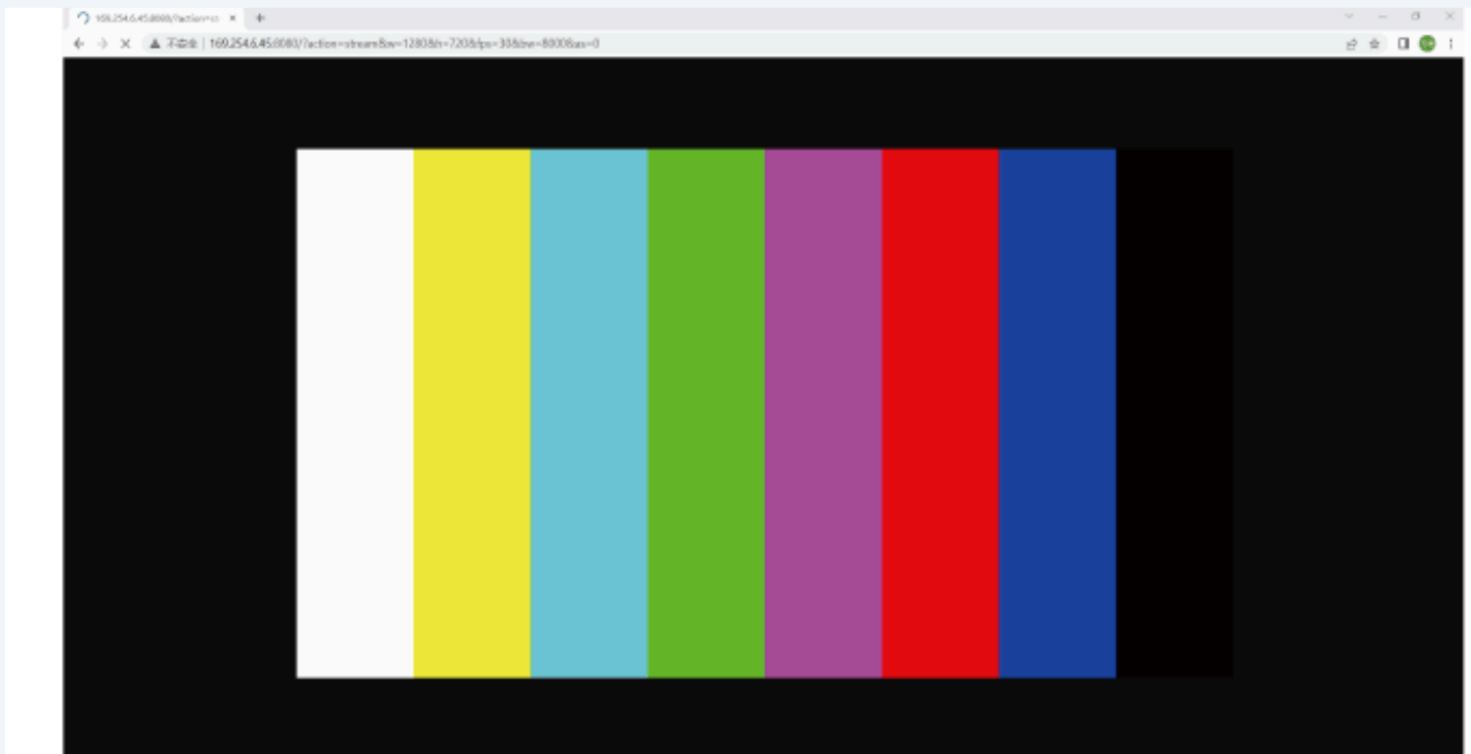


MJPEG Substream – custom resolution, e.g. w=1280&h=720&fps=30&bw=8000&as=0



09.2 VLC Media Player Instruction

Firstly, perform steps 1~3 as described in Chapter 09.1, then open the VLC media player on PC.

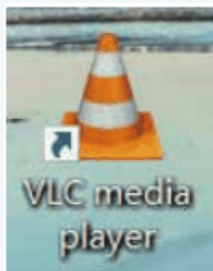


Click “Media > Open Network Stream”. After clicking the option, the following page will appear.

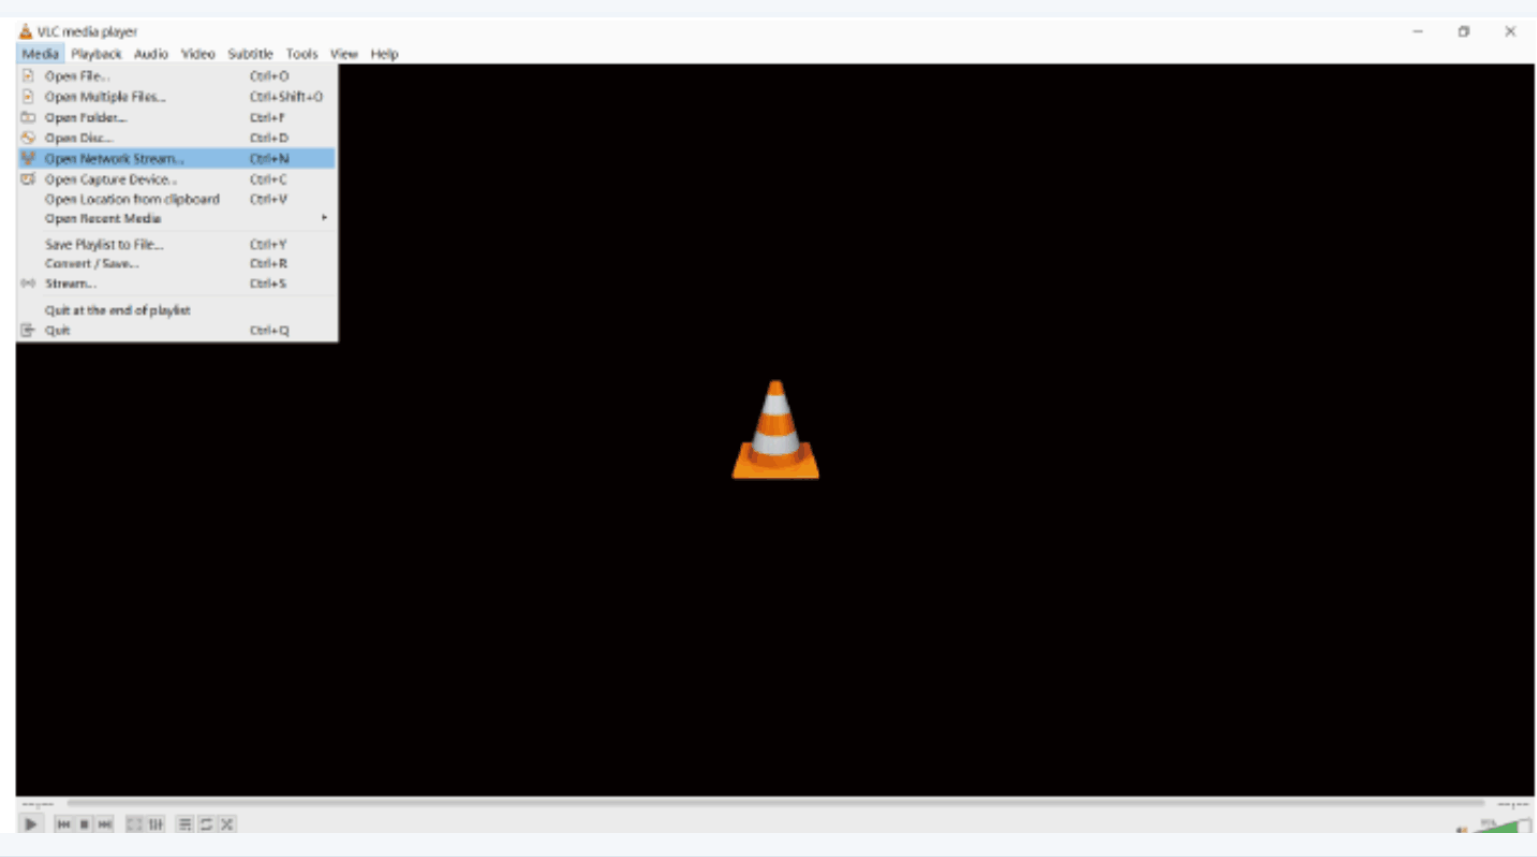


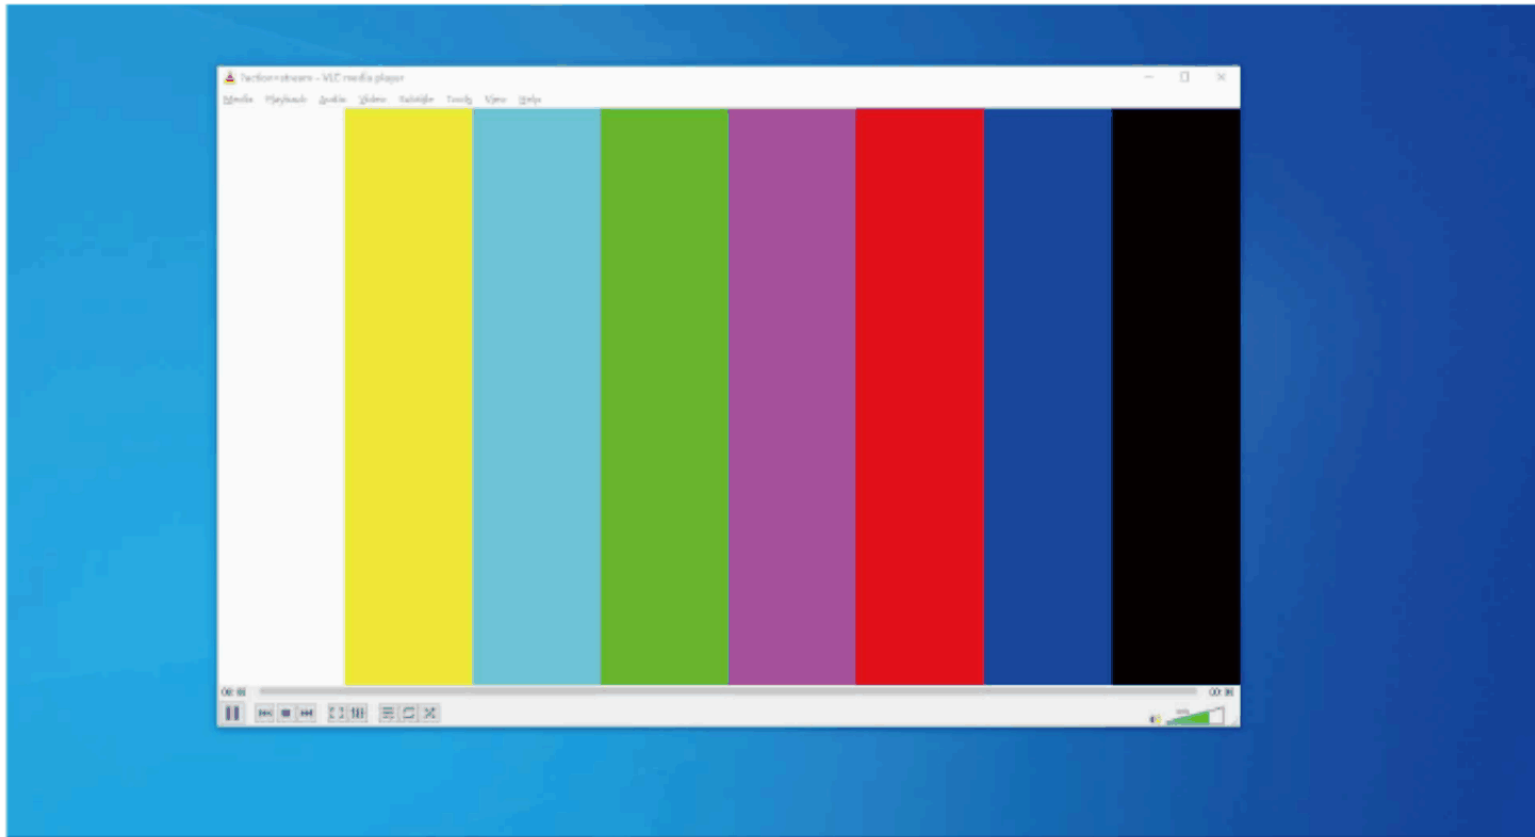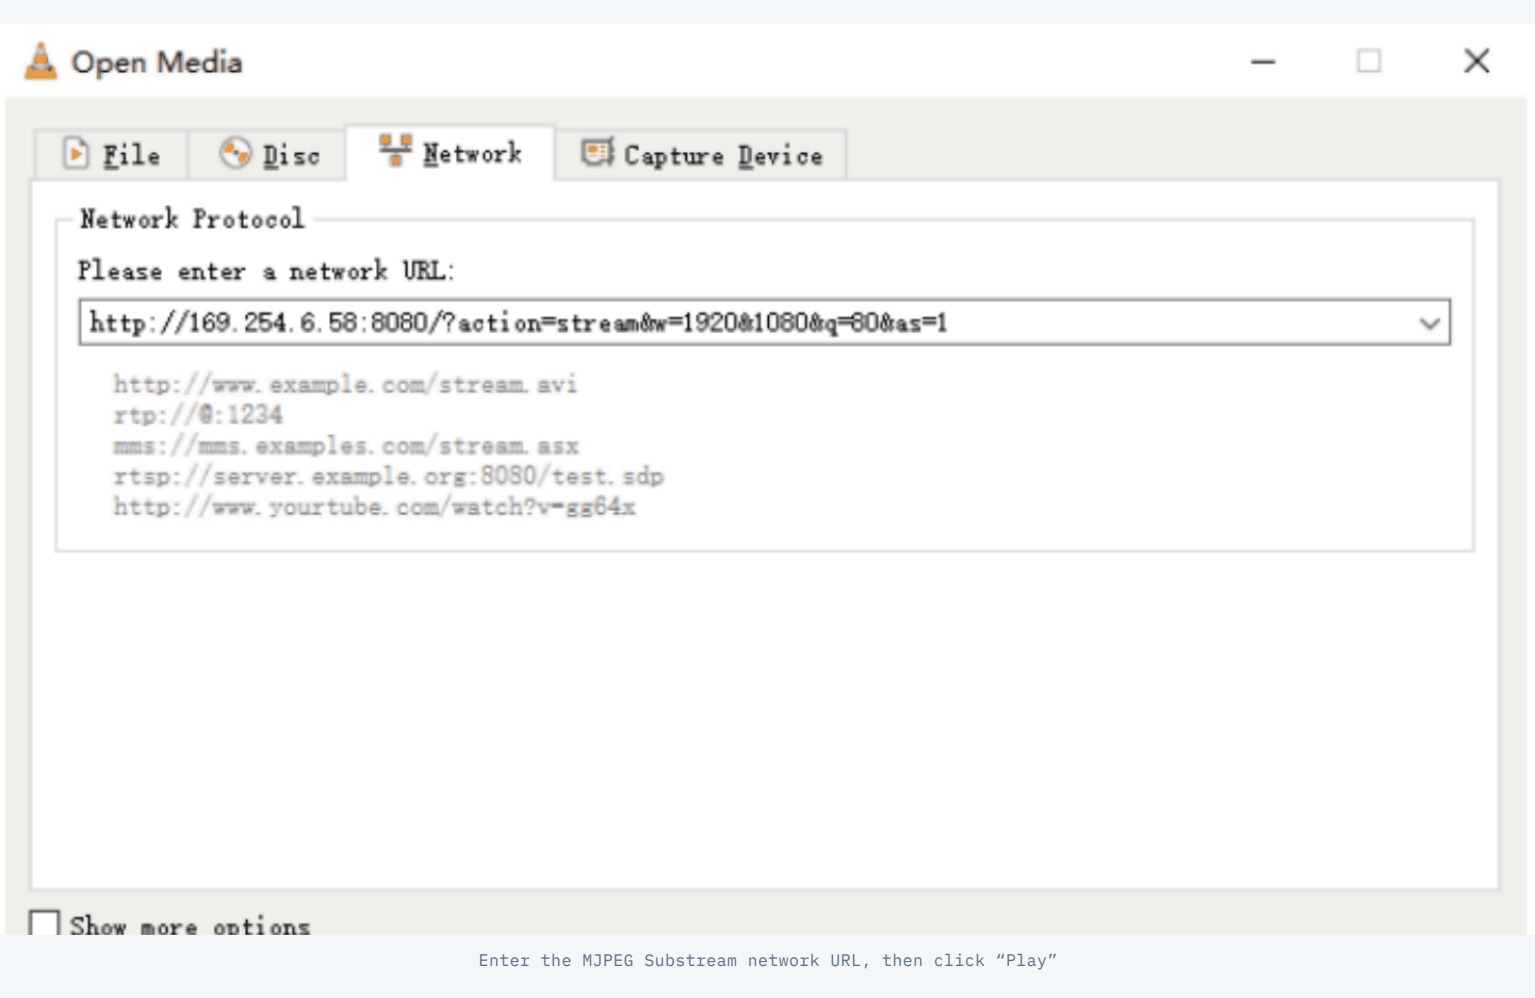

Choose “Tools > Codec information”, a pop-up window will display and show Stream information, as shown below.

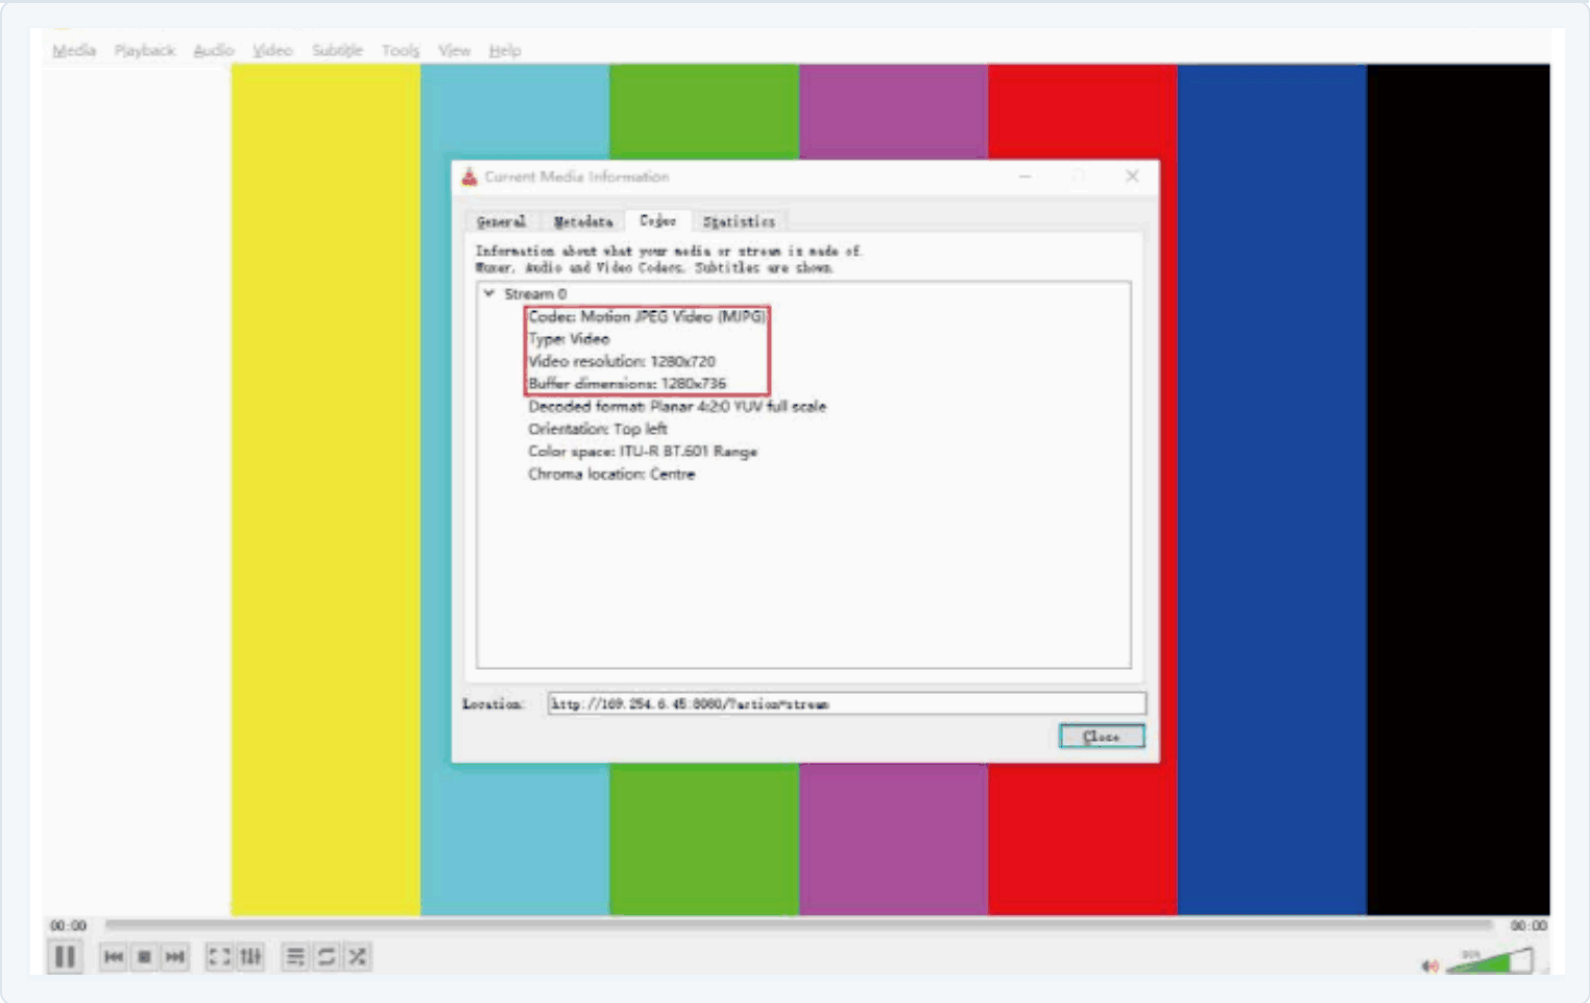

Choose “Tools > Codec information > Statistics” to check current Bitrate. Please see the following picture.

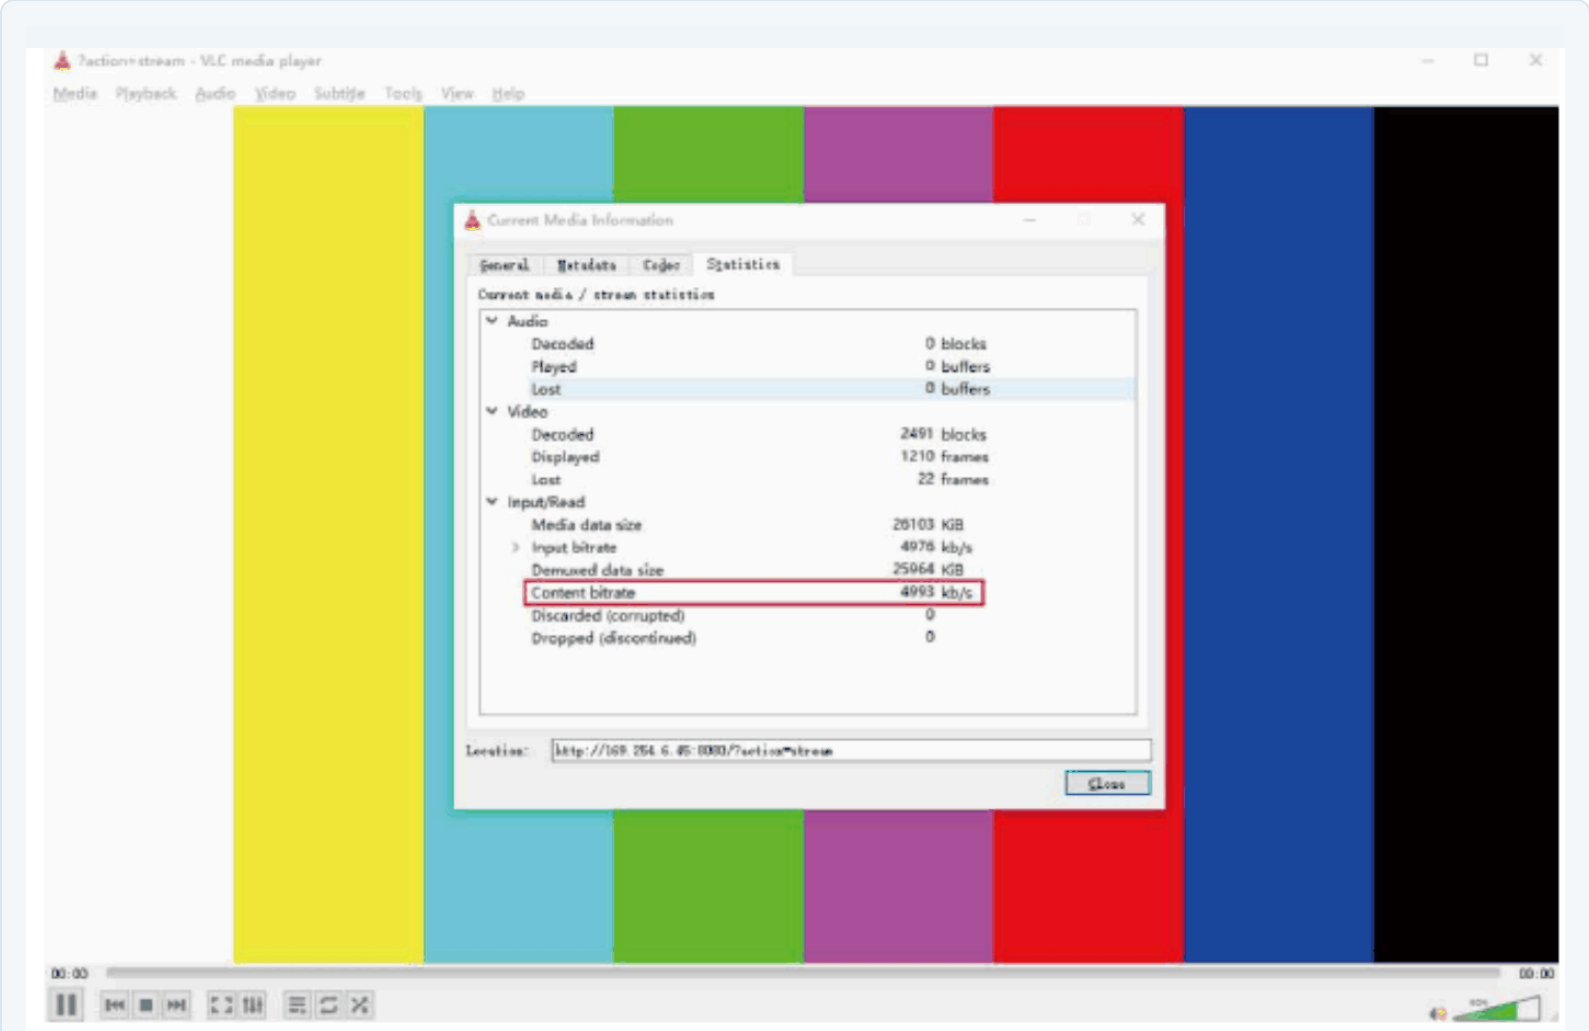

The Bitrate is floating up and down when you check it. This is a normal phenomenon.

10 Switch Model

A network Switch used to set up the system should support the following features.

- Type of layer 3/managed network Switch.
- Gigabit bandwidth.
- 8KB jumbo frame capability.
- IGMP snooping.


RECOMMENDED SWITCH MODELS	
MANUFACTURER	MODEL NUMBER
CISCO	CISCO SG500
CISCO	CATALYST series
HUAWEI	S5720S-28X-PWR-LI-AC
ZyXEL	GS2210
LUXUL	AMS-4424P

11 4K over IP System Control


This product can be controlled by Controller Box or third-party controller. For details of 4K over IP system control, please refer to the user manual of “Video over IP Controller”.

12 Application Example

LAN Mode 1 — Both JPEG2000 video stream and Dante audio stream are transmitted through the LAN 1(PoE) port.

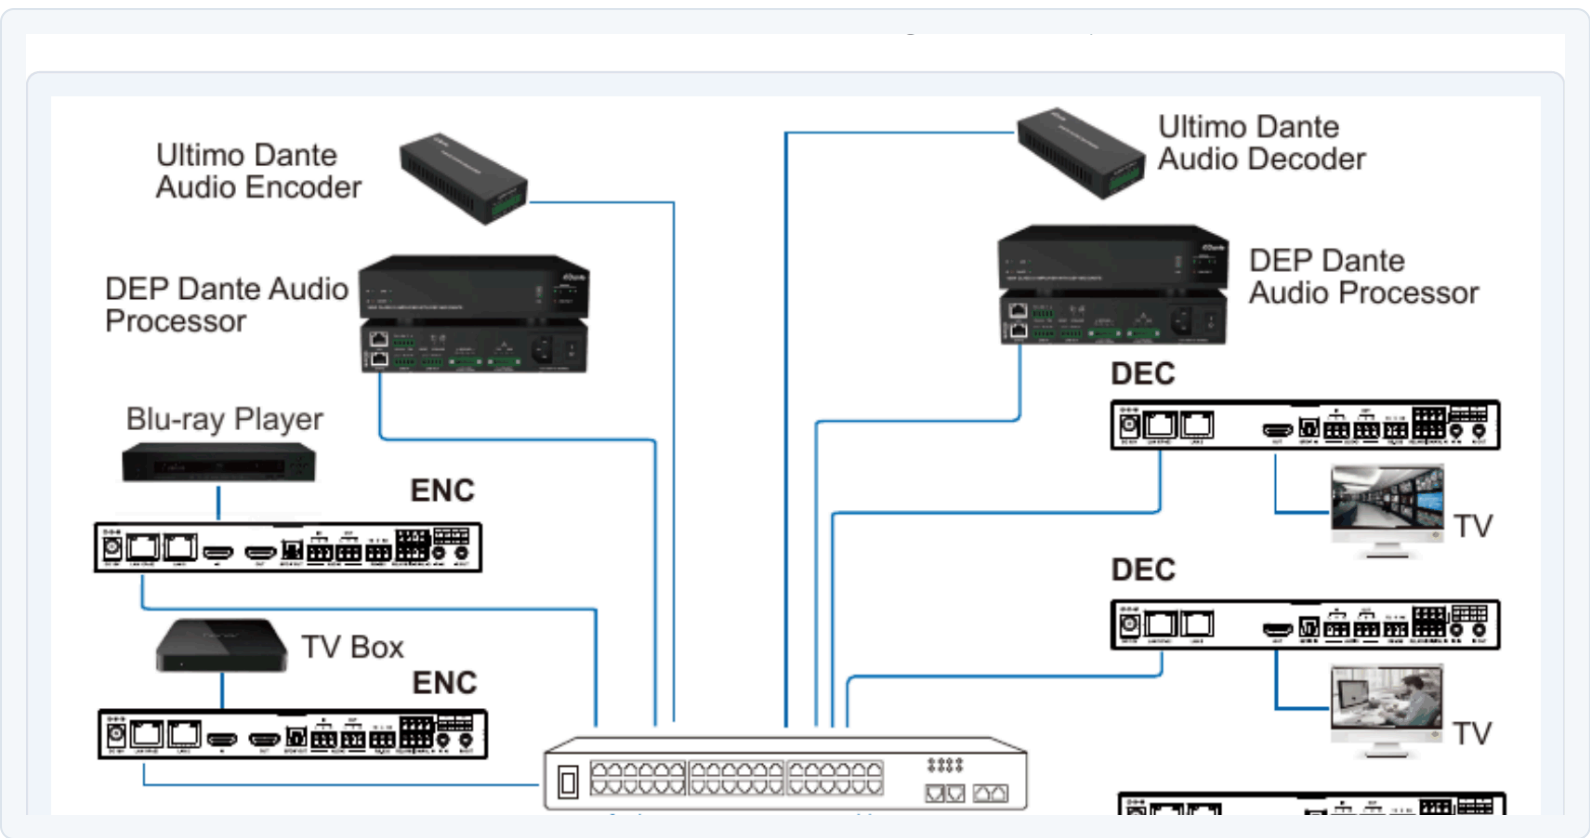

LAN Mode 2 (default) — JPEG2000 video stream is transmitted through the LAN 1(PoE) port, and Dante audio stream is transmitted through the LAN 2 port.

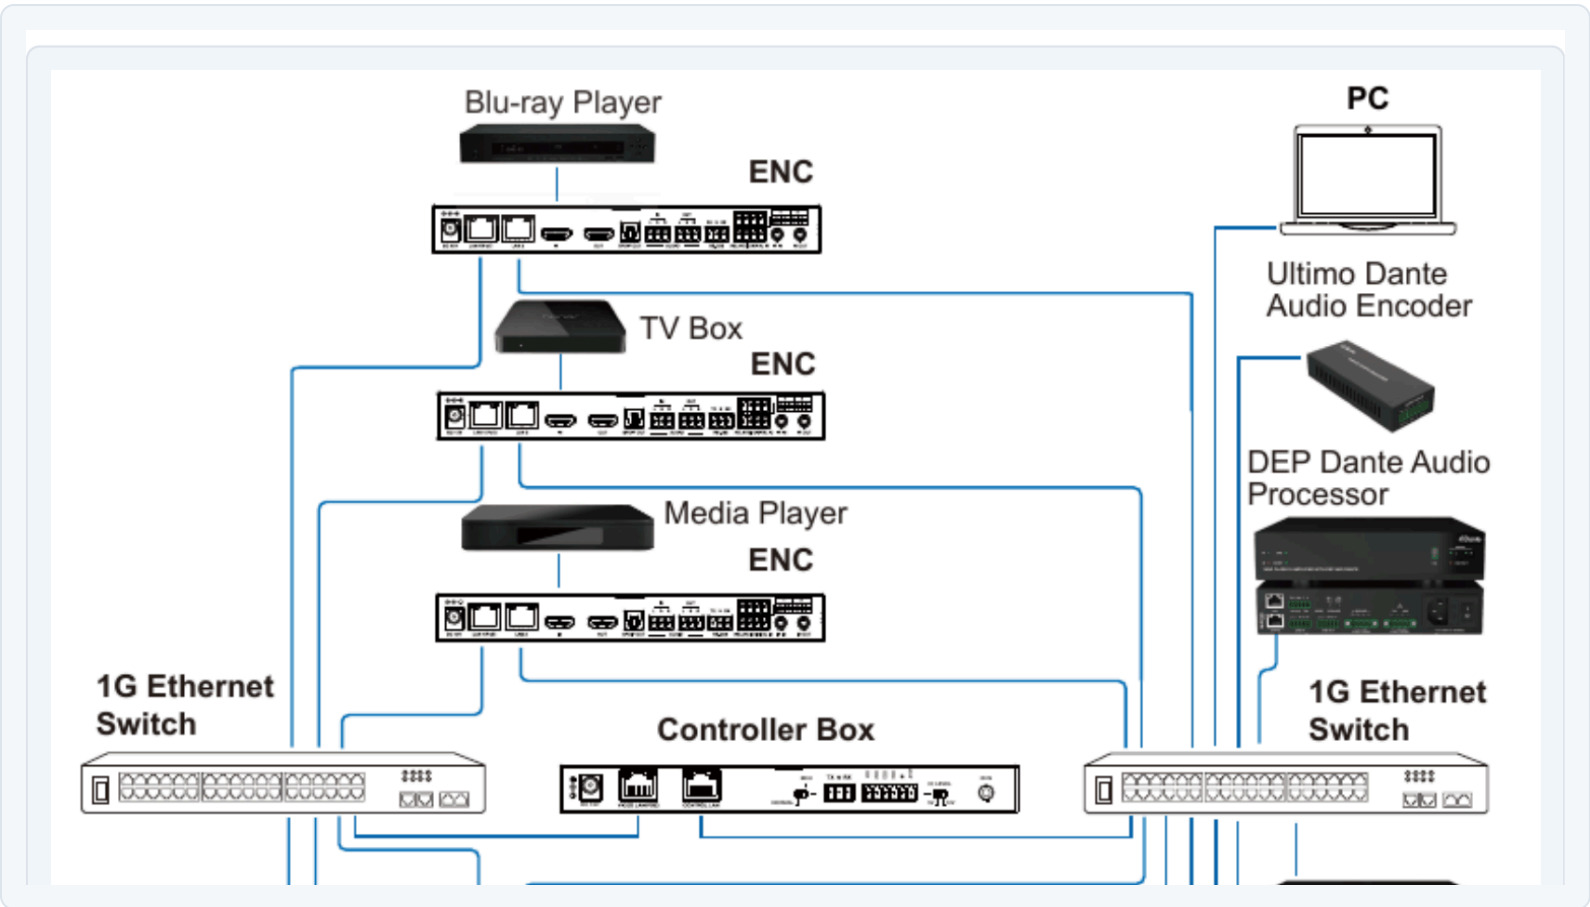

Notes:

- (1) LAN Mode 2 is the default mode, and the mode switching is set by the Controller Box through Web GUI or Encoder/Decoder front panel buttons.
- (2) The Controller Box has two LAN ports, one is Video LAN and the other one is Control LAN. The purpose of designing Controller with two LAN ports is to isolate audio/video (AV) network from control network. So to make AV network as an independent network which can not be accessed from control network directly, it's for bringing network security and avoiding AV network traffic flowing into the network in which the controls and managements are for the IP system.
- The strongly recommended system setup is connecting Video LAN and Encoders/Decoders in a network Switch, connecting Control LAN and PC in another network Switch. The controls from Control LAN can be achieved by Web GUI/Telnet or SSH login/API commands, all these controls can be bridged by the Controller and applied onto Video LAN. The two LANs are isolated.
- For simple usage, you can only connect all Encoders/Decoders and Video LAN and PC RJ-45 port into a single network, and let the Control LAN port not-connected (floating), as Video LAN also supports Web GUI/Telnet or SSH login/API commands controls, this seems “convenient” for general use scenarios, but this is only suggested for system in which there is no network isolation requirement or network traffic non-sensitive.
- Only Control LAN connected while Video LAN floating, this is not allowed.
- (3) For the default IP mode of Control LAN port of the Controller Box is DHCP, the PC also needs to be set to “Obtain an IP address automatically” mode, and a DHCP server (e.g. network router) is required in the system.
- (4) If there is no DHCP server in the system, 192.168.0.225 will be used as the IP address of Control LAN port. You need to set the IP address of the PC to be in the same network segment. For example, set PC's IP address as 192.168.0.88.
- (5) You can access the Web GUI by inputting Control LAN port IP address (192.168.0.225) or URL “http://controller.local” on your computer's browser.
- (6) No need to care about settings of Video LAN port of the Controller Box, they are managed by Controller automatically (Default).
- (7) When the Network Switch does not support PoE, the Encoder, Decoder and Controller Box should be powered by DC power adapter.

The terms HDMI and HDMI High-Definition Multimedia interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. Bluknot is a registered trademark of Bronx Systems India Private Limited. www.bronx.co.in · sales@bronx.co.in · admin@bronx.co.in